

MAJORITY

KING'S

DIGITAL RADIO MUSIC SYSTEM



Instructions Guide

Contents

What's in the Box?	1
Controls And Functions	2
Support	6
Instructions Guide	7
Basic Operation	8
Internet Radio.....	11
Media Centre.....	13
FM Radio.....	15
DAB/DAB+ Radio	16
CD Player	18
Information Centre	20
AUX-In.....	21
Bluetooth.....	22
Local Radio.....	23
Configuration Settings	24
Settings: Additional Features	29
Remote Control App	31
Troubleshooting	33
Specifications	34
Warranty	34
Safety Information	35

**3 YEAR
WARRANTY**

Watch video tutorials and register
your product for a FREE 3-year warranty
at www.majorityradios.co.uk


Box Contents

1. Majority King's
2. Remote Control
3. Power Adapter
4. Instructions Guide




Controls And Functions

Front Panel

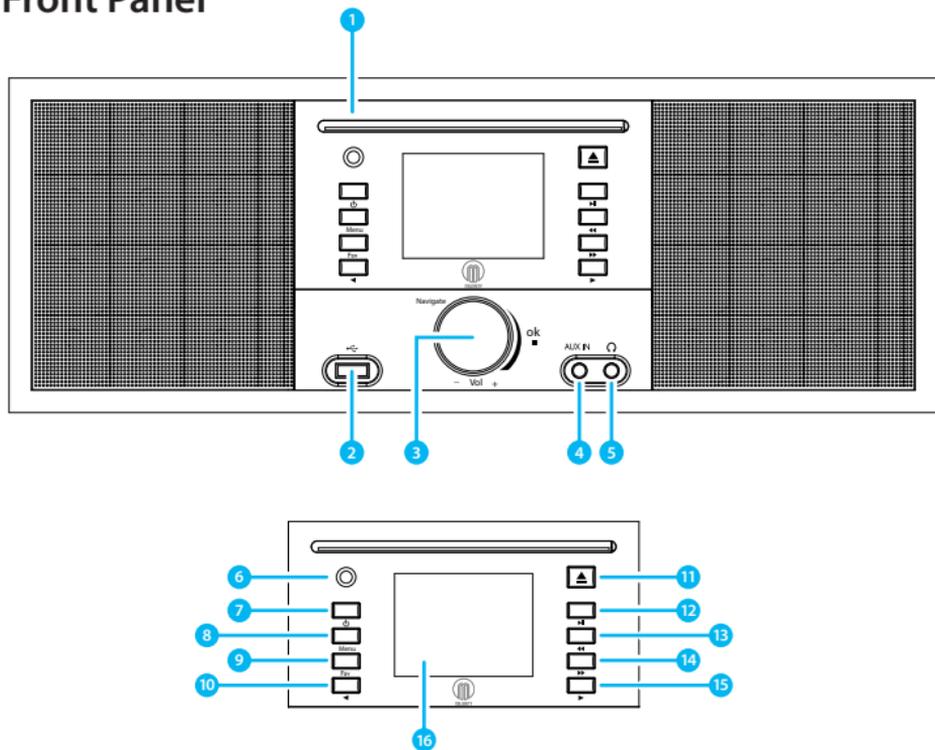

1. CD Slot
2. USB Port
3. Volume & Navigation Dial / Select Button
4. Aux In
5. Headphone Jack
6. Remote Sensor
7. Power (On/Off)
8. Menu button
9. Favourite
10. Previous
11. Eject Disc
12. Play/Pause
13. Rewind
14. Fast Forward
15. Next
16. Display Screen

Back View

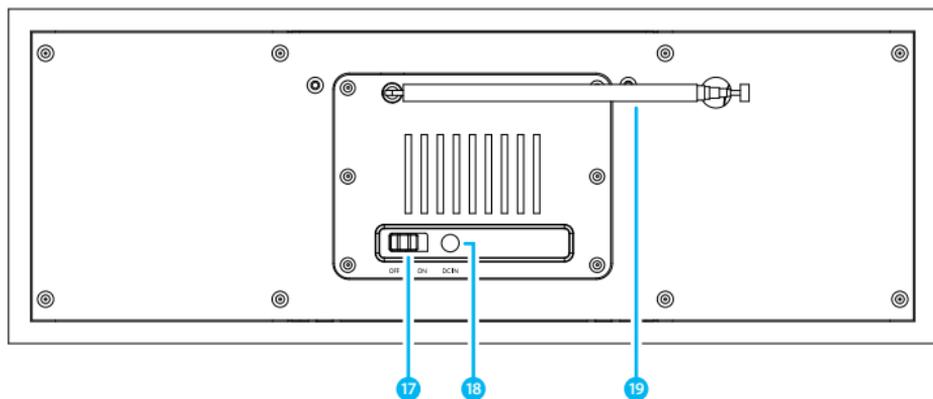


17. On/Off Switch

18. Power input

19. Aerial

Controls And Functions

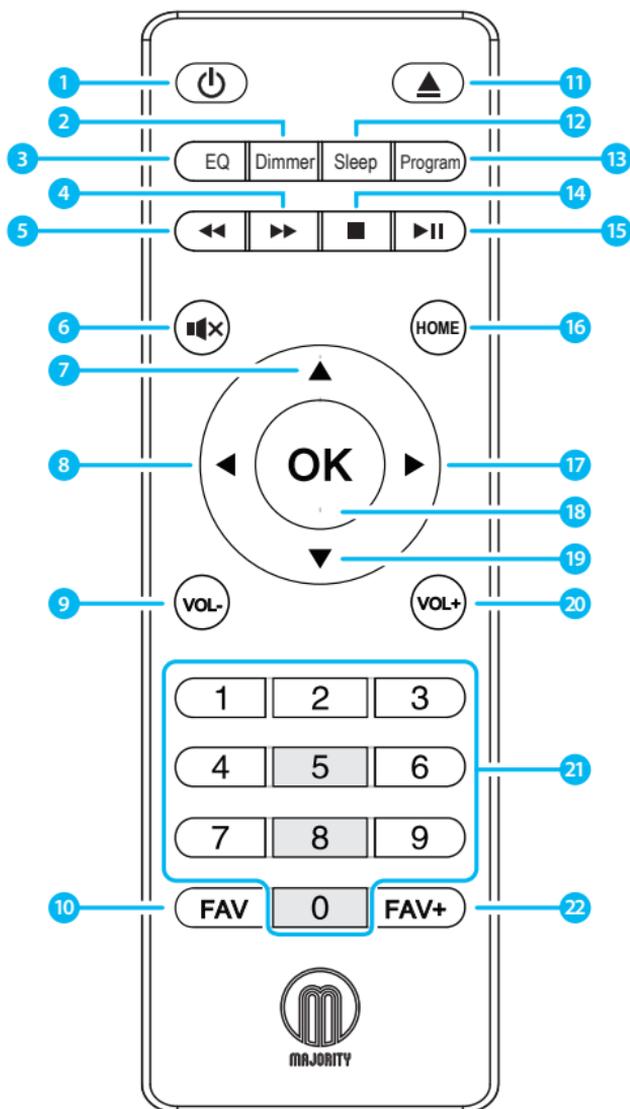

- 1. Power On/Off**
Switch the unit between on and Standby mode
- 2. Dimmer**
Switch between two dimmer settings
- 3. Equaliser**
Adjust the sound to different media options for the best sound
- 4. Skip forward button**
Skip forward through tracks in CD mode
- 5. Skip backward button**
Skip backwards through tracks in CD mode
- 6. MUTE button**
Mute media when it is playing
- 7. Scroll up**
- 8. < back button/scroll left**
Go back to previous display screen or options available. Also use to scroll left
- 9. Vol - button**
- 10. Fav Preset recall**
When in the audio mode view favourite stations that have been set
- 11. CD eject button**
Open/close CD drawer
- 12. Sleep button**
Select repeatedly until desired sleep timer set on top right of display
- 13. Program button**
- 14. Stop button**
- 15. Pause/Play**
- 16. HOME button**
View main display screen
- 17. > forward button/scroll right**
Use to go to next option/screen or scroll right.
- 18. Select button**
Select chosen option
- 19. Scroll down**
- 20. Vol + button**
- 21. Keypad**
Type numbers and letters
- 22. Add as a favourite/preset**
When on the desired station, press to set as a favourite. Use the select OK button to choose preset number

Support

Thank you for your purchase of the Majority King's internet radio.

Please follow the guidance of the manual to set up your new purchase and begin enjoying its features.

If you require further assistance with your new radio, please contact our support team on the Majority website:

<https://www.majorityradios.co.uk/support>

Navigation Settings

Standby button: This should be used to turn your radio on and off. The Standby screen will display the time, date and any settings set such as alarms.

To turn off standby, press the Standby button to be taken to the home screen, or last function that you were using before putting into standby.

Select Dial/Volume: Rotate the dial clockwise or anticlockwise to scroll through choices and press down the dial to confirm selections.

Change the volume when you are on the radio station playing screen. The volume will not be altered when you are navigating around the radio as it will begin to function as the Select dial.

Home button: Select the Home button to browse through your audio options such as Local Radio, Internet Radio, Media Centre, Information Centre, AUX, Configuration Settings.

Use the Home button to cancel out of settings being made.

Dimmer: Select Dimmer to choose between the two default options. Alter dimmer's brightness in Configuration settings.

< and > buttons: Buttons used to alter settings. Use the 'previous' button to go back a step.

Basic Operation

Please note that the instructions within this manual will refer to the radio button number e.g (**Ref.*number***) in accordance to the diagrams on pages 2-3.

When referring to the remote, the remote button number will be referenced as (**Rem.*number***) in accordance to the diagrams on pages 4-5.

Starting up your internet radio

Plug the adaptor connector into the back of the system labelled 'DC in' (**Ref.18**) and turn the power on from the mains. Switch the button at the back of the radio to 'ON' (**Ref.17**) to display a 'Welcome' screen.

Ensure the antenna is extended as far as possible. This will enable you to get the best signal you can.


After the Welcome screen, you will be able to select your chosen language by scrolling with the Select Dial (**Ref.3**). Select your language by pressing down the Select Dial.

If this is the first time of using your radio, you will get the option to set up your WiFi to stream Internet Radio with the message "Would you like to configure network now?". If you select YES, your radio will begin to scan for nearby networks to connect to.

If you select NO then you can set this up later in configuration settings.

Manual WiFi Set-up


If you select YES, you will be able to select your chosen WiFi network and enter WiFi password in the next display screen. Type letters/numbers by scrolling with the select dial (**Ref.3**) until the correct digit is displayed and click '>' (**Ref.15**) to go to the next digit. Once finished, press down the select dial to confirm.

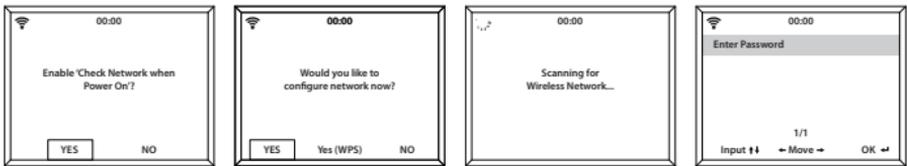

Wireless Network (WPS PBC)

When at the “Would you like to configure network now?” stage, if you select “YES (WPS)” your radio will begin to search for WiFi connections.

Whilst this has been selected you will have 120 seconds to click the WPS button on your WiFi modem. This will connect your WiFi to your radio without manually writing in the passcode.

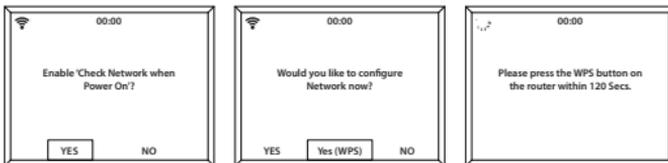

WiFi Connection Complete!

Once your WiFi is connected by manually entering your WiFi password or via WPS, you will be taken to the main menu screen and the WiFi signal will appear in white at the top left. Your internet radio is now set up!

Internet Radio

Go to the main menu screen by selecting 'Menu' on the radio (**Ref.8**) or 'Home' on the remote (**Rem.16**). Select 'Internet Radio' on the display screen by turning the dial and pressing the Select dial (**Ref.12**) or the OK button on the remote (**Rem.18**)

When in the 'Internet Radio' screen there will be multiple options:

My Favourite: Your favourite stations will be saved here for easy listening.

Radio Station/Music: Select this option to browse internet radio stations in the categories of: Global Top 20, Genre, Country/ Location, Highlight. Find stations under relevant categories and select your chosen internet station by selecting with the Select dial.

Local Radio: The radio is automatically set up to detect your country's top DAB stations, Top 10 stations, All Stations, plus a variety of genres into categories in alphabetical order. Select the category that you wish to listen to with the 'Select' dial (**Ref.3**) and continue browsing until you find your desired station.

Sleep Radio: Choose from multiple relaxation sounds.

History: Browse through recently listened to stations

Service: Search for an internet radio station or add a new station. To search a new station, select 'Search Radio Station' to go to the search tool. Turn the Select dial (**Ref.3**) to highlight the chosen character and click '>' (**Ref.15**) to move to the next character.

To go back to the previous character, press '<' (**Ref.10**) to highlight it. Press the Select dial (**Ref.3**) to search for the internet station.

Pre-setting your favourite internet stations

When you have found your desired station, **hold** down 'Fav' (**Ref.9**) for a few seconds or select the 'FAV+' button on the remote (**Rem.22**) to go to the 'Add to my Favourites' screen. Turn the Select dial to choose the desired preset number and select your option (**Ref.3**) or use buttons on the remote and select the 'OK' button (**Rem.18**)

To view your preset favourite stations, press the 'Fav' button to scroll through your choices.

Quick use tip: Once presets have been set for Internet Radio, you can scroll through the main display screen to one of these options e.g Internet Radio and without selecting it, click 'Fav' to view your preset favourite stations for quick listening.

Media Centre

Select 'Media Centre' on the main display screen with the Select dial (**Ref.3**) or by using the navigation buttons on the remote.

USB:

Plug in a USB stick (**Ref.2**) with files. Highlight the desired folder/song and select it for your chosen song to play.

USB port also able to charge your device.

UPnP:

Universal Plug and Play allows you to connect to other devices to play your music such as personal computers (Windows media player), mobile (GooglePlay) and other devices.

Once you have selected UPnP, you may need to select the radio from your phone to connect to or allow access to your phone files. **Both your device and the Kings radio will need to be connected to the same WiFi network.**

In UPnP settings, select the device with the Select dial/OK button that you want to play music or media from on the radio display screen.

If you have set up folders on your device that is being shared you can use the Select dial to scroll through your choices and confirm your selection with the select dial/OK button (**Ref.3**)

My Playlist:

You can create a playlist of favourite music or media from UPnP. When you are playing the media through UPnP, press and hold the Select dial from unit or remote control to save it into My Playlist.

Access 'My Playlist' from the Media Centre.

Clear My Playlist:

If you have created a playlist via UPnP connection, you can select this option to clear the playlist. Select the option 'Clear my Playlist' with the select dial.

The radio will then display "Confirm delete?". Select YES to delete your playlist with the Select dial (**Ref.3**)

My Media U

In configuration settings there is the option to connect a MediaU account via the website <http://www.mediayou.net/>

Ensure that WiFi is connected to the radio, and then obtain the wireless MAC address of the radio via Information Centre > System Information > Wireless Information. Enter this address on the MediaU website to allow the radio to sync your account.

When this is successfully configured you are then able to save and view your own MediaU station playlists.

FM Radio

Select 'FM mode' on the main display screen with the Select dial (**Ref.3**) or with the navigation buttons on the remote. Once selected, the FM mode will start on 87.50MHz.

To save all stations with strong signal, press the Select dial (**Ref.3**) when in FM mode for a scan to begin. Once the auto-scan is complete, stations will be saved in your favourites.

You will then be able to browse through these saved stations by **holding** down the '<' or '>' buttons (**Ref. 10/15**) to skip between saved stations.

To manually scroll through FM frequency, simply press the '<' or '>' buttons (**Ref. 10/15**) to go backwards or forwards through the frequency wave.

Pre-setting your favourite FM stations

To save presets manually, select and listen to the station frequency number for the station you wish to save.

Follow by **holding** down the 'Fav' button for 1-2 secs (**Ref.9**) and the number '01' will display on the screen. Use the Select dial (**Ref.3**) to browse through preset numbers (up to 99) and select the chosen preset number you wish to save it as by pressing the select dial.

Recalling preset FM stations

View your favourite FM stations when you are on FM mode by simply selecting the 'Fav' button (**Ref.9**) and begin scrolling through saved stations.

DAB/DAB+ Radio

Select 'DAB/DAB+' on the main display screen by turning the dial and pressing the Select dial (**Ref.3**) or with the remote navigation buttons.

On first use of DAB on your Kings radio, your radio will begin scanning for DAB stations and will show 'Scanning' on the display screen. It will display how many stations have been found as the search continues.

Once all of the available stations have been found, the screen will display the choice of available stations. Scroll through using the Select dial (**Ref.3**) or navigation buttons to select the station you wish to listen to.

When you have selected a station, the screen will display the station and begin to play. To choose previous or next station, use the Select dial to scroll accordingly.

To go back to the list to scroll through manually, select the '<' button (**Ref.10**) to go back. To rescan your stations, go on the main list page for the DAB stations and select the '<' button.

When on your chosen station, select the '>' button (**Ref.15**) to show information on the station. The screen will automatically scroll through information and display genre, MHz, song playing, KHz and Kbps.

Pre-setting your favourite DAB/DAB+ stations

When you have found your desired station, **hold** down 'Fav' (**Ref.9**) for a few seconds to go to the 'Add to my Favourites' screen. Turn the select dial (**Ref.3**) to choose the preset number (up to 99) and select your option.

Alternatively, when you are on the list screen of DAB stations you are able to highlight the chosen station and **hold** down 'Fav' (**Ref.9**) to go to the 'Add to my Favourites' screen.

Recalling preset DAB/DAB+ stations

View your favourite DAB/DAB+ stations when you are on DAB mode by simply selecting the 'Fav' button (**Ref.9**) and begin scrolling through saved stations.

Quick use tip: Once presets have been set for DAB, you can scroll through the main display screen to one of these options e.g DAB and without selecting it, click 'Fav' (**Ref.9**) to view your preset favourite stations for quick listening.

CD Player

Select 'CD' on the main display screen by turning the dial and pressing the Select dial (**Ref.3**) or with the remote navigation buttons.

The display screen for the CD function will now show "Reading..." followed by "No Disc".

Select the Open/Close CD function on the radio (**Ref.11**) or the remote (**Rem.11**). Insert your CD slightly and the drive will take the CD into the system to play.

The first song on the CD will now begin to play and album artwork will display on the screen. Please note that not all CDs will display album artwork.

CD Functions

To skip between songs, use the '<' or '>' buttons on the radio (**Ref. 10/15**) or the remote (**Rem. 8/17**). Pause/Play using the button on the radio (**Ref.12**) or remote (**Rem.15**).

To skip rewind/forward through a song playing, **hold** down the '<<' or '>>' buttons (**Ref. 13/14**) (**Rem. 4/5**) and release when you wish to stop skipping.

To eject the CD, press the Open/Close CD function on the radio or on the remote, as per the guidance to enter the CD.

Press the 'Stop' button (**Rem.13**) to stop the album. This will also display how many songs are on the album and total playing time. Press 'Play/Pause' to begin listening again (**Rem.15**).

Arrange a CD song program

- 1.** When the CD is put into 'Stop' (**Rem.14**), you can program the CD player to play songs in a particular order. Simply follow by pressing the "Program" button on the remote (**Rem.13**) to step into the state of programming.
- 2.** Once in program settings, the display will show P1 001 to display the first song on the CD as 001. You can now choose what song you would like as program number 001 by using the '<' and '>' buttons (**Rem.8/17**) to scroll through to the song you would like to choose. Once on the chosen song for 001, press the 'Program' button (Rem.13) to select, and be taken to choose your next programmed song.
- 3.** For the next song, the display will show P2 002 to show the program 2. Now use the '<' and '>' buttons (**Rem.8/17**) to scroll through to the song you would like to choose. Once on the chosen song for program 2, press the 'Program' button (Rem.13) to select, and be taken to choose your next programmed song. On the display, the song number will show as 001 for CD song number 1, 008 for CD song number 8, 010 for CD song number 10 etc.
- 4.** After you have finished program song selection, press the 'Play' button (**Rem.15**) to play the songs which have been programmed.

Press "Stop" button to exit the "Program" when programming.

When the Program playback is activated, press "Eject" or "Stop" button twice, then it will exit the program playback mode.

Information Centre

Select 'Information Centre' on the main display screen by turning the dial and pressing the Select dial (**Ref.3**) or with the remote navigation buttons.

Weather Information: To select the weather information for a desired place, first select the continent by using the Select dial to scroll and select. Following this, then select the country, followed by the town/city.

Once you choose a chosen town/city, the following information will be displayed: current temperature, weather symbol image, approximate temperature range for the next 5 days.

Financial Information: Select from a range of stock market index's from around the world. Scroll and select using the Select dial.

System Information: View system version and wireless connection information. If wireless information is selected, information such as WiFi's signal strength can be found.

AUX-In

Select 'AUX' on the main display screen by turning the dial and pressing the Select dial (**Ref.3**) or with the remote navigation buttons.

Plug an AUX cable into your device and connect cable via AUX-in port (**Ref.4**) at the front of the radio.

Begin playing audio from your device and this should play on the radio when in AUX mode.

Select your chosen audio on your device and play.

Control the functions of the audio via your device.

Bluetooth

Select 'Bluetooth' on the main display screen by turning the dial and pressing the Select dial (**Ref.3**) or with the remote navigation buttons.

Go to your device settings to connect your device to the radio via Bluetooth.

The internet radio's device will display as 'Majority King's'. Select this radio to connect and your radio should sound "Connected".

Select your chosen audio on your device and play.

Control the playing audio from your device, rather than with the radio's navigation buttons.

Local Radio

Select the option of 'Local Radio' on the main display screen with the Select dial (**Ref.3**) or with the remote navigation buttons.

Browse through a range of radio stations in your region including top DAB stations in your area, Top 10 stations and a range of genres put into categories.

Configuration Settings

Select 'Configuration' on the main display screen to browse through a range of display, performance and audio settings.

Network: Select this for WiFi and network options

Wireless Network Configuration

On the Network settings, you can set up a Wi-Fi connection by selecting Wireless Network Configuration. The radio will then start searching for available WiFi connections.

Find your WiFi connection and select it with the Select dial (**Ref.3**). To type letters/numbers, scroll with the Select dial until the correct digit is displayed and click '>' (**Ref.15**) to go to the next digit. Press '<' if you wish to go back to previous digit (**Ref.10**) Once you are finished, press down the select dial to confirm.

Once your WiFi is connected, the main menu screen will show and the WiFi signal will appear in white at the top left corner. Please note: Wi-Fi password is case sensitive.

Wireless Network (WPS PBC)

Select this option to search for your WiFi connection. Whilst this has been selected you will have 120 seconds to click the WPS button on your WiFi modem. This will connect your WiFi to your radio without manually writing in the passcode.

Settings: Date and Time

Manually setting date and time

There is the option to manually set the time and date instead of using auto-detect to set this up.


Go to 'Configuration' settings and select 'Date&Time' by scrolling and selecting with the Select dial (**Ref.3**).

Select 'Set Date and Time' with the Select dial and choose 'Manual Setup'.

Change the day by highlighting the character and using the Select dial to scroll through to the desired unit. Once you have got the correct unit, click '>' (**Ref.15**) to go to the month. Continue this process with the year, the hour and the minutes.

Once the manual set up is complete, press down the Select dial (**Ref.3**) to Enter.

To change the format of the date and the time, you can alter these settings under the 'Date&Time' function.

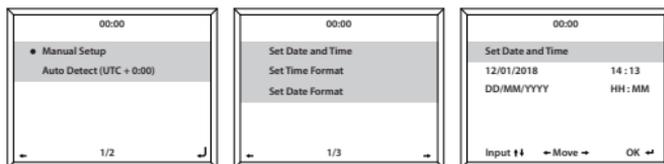

Settings: Alarm Clock

To set an alarm on your radio, go to 'Configuration' settings and scroll through to select 'Alarm'.

After selecting 'Alarm' on 'Configuration' settings, select Alarm 1 or Alarm 2. On the alarm option, highlight and select 'Turn On'.

Select 'Repeat' to choose the regularity of your alarm with the Select dial (**Ref.3**). You can choose between Everyday, Once or select individual days for the alarm to sound. Once you have made your selection, press the '<' button (**Ref.10**) to go back to the other alarm settings.


Select 'Time:' and turn the dial to highlight the alarm hour. Once you have found the desired hour, press '>' (**Ref.15**) to then change the minutes. Once the minutes are at the correct value, press down the Select dial to confirm and go back to alarm settings.

Now select 'Sound:' with the dial or remote. You can now choose between beep, melody, internet radio, FM, DAB/DAB+ or USB.

If you are setting your alarm sound as internet radio, FM or DAB/DAB+ then you will now be taken through your preset favourite stations. Select your chosen alarm station with the Select dial.

The alarm symbol will now show on the standby display screen.

Settings: Alarm Features

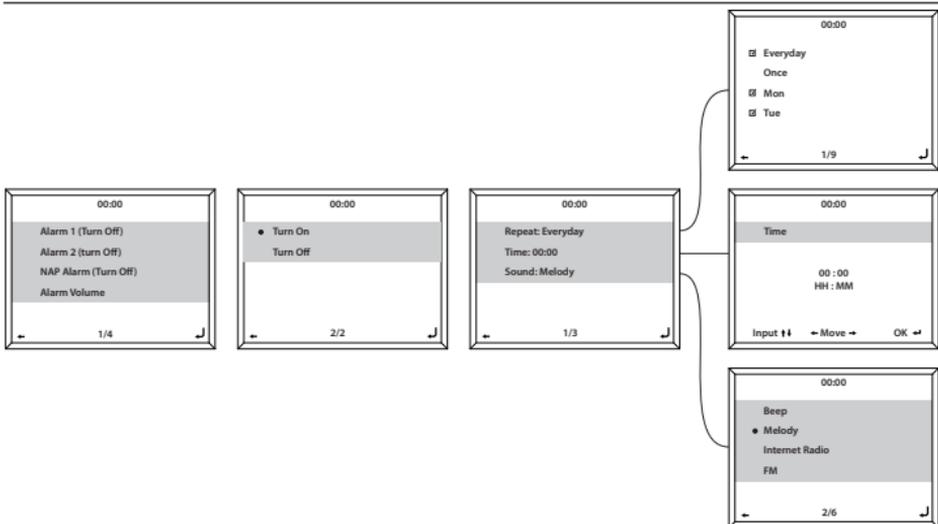

How to cancel your alarm

To cancel your alarm, select 'Alarm' in 'Configuration' settings and select the alarm you wish to turn off. Once the alarm is selected, you will have the option to turn off or on. Highlight the 'Turn Off' option and use the Select dial to confirm.

NOTE: Change the alarm volume by going to 'Alarm Volume' setting in the Alarm setting screen.

How to turn off your alarm when sounding

When your alarm is sounding, select the 'Standby' button on the radio (**Ref.7**) or on the remote (**Rem.1**) for alarm to stop.

If you have set an alarm to sound everyday or more than once, the alarm icon will still remain on the main display screen.

How to put your alarm on snooze

When your alarm is sounding, press the 'Select' dial (**Ref.3**), or any other button except 'Standby' (**Ref.7**), '<' or '>' (**Ref.10/15**) to stop the sound and put into Snooze mode. Use the respective buttons on the remote control to set to Snooze mode.

The Snooze function will make the radio sound again in 5 minutes. Stop the Snooze alarm by pressing 'Standby' (**Ref.7**).

Nap alarm

After selecting 'Alarm' in 'Configuration' settings, select 'NAP alarm'.

Choose how many minutes you would like to have the nap alarm on with the options of: 5, 10, 20, 30, 60, 90, 120 minutes.

Once set, the Nap alarm will display on the bottom right of the standby screen as [0*Time Set*]. The nap alarm timer will display here how many minutes are left of the nap alarm.

Alarm volume

Select the option for 'Alarm Volume'. Change alarm volume by using '<' and '>' buttons (**Ref. 10/15**) to change to desired level. Once the correct sound volume has been chosen, wait a few seconds for the radio to automatically take you back to alarm setting options.

When the alarm is sounding you are also able to change the alarm volume by using the '<' and '>' buttons.

Settings: Additional Features

The following options are available in Configuration settings:

Timer

In 'Configuration' settings, select the option for 'Timer' and a screen with 00:00 will display.

To go up in seconds, click the '>' button (**Ref.15**). To go down in seconds, click the '<' button (**Ref.10**). Hold down the '<' or '>' to move through the timer quickly.

Once you have chosen the correct timer amount, confirm it by pressing the Select dial (**Ref.3**) or OK on the remote (**Rem.18**)

Dimmer

The dimmer button on the remote (**Rem.2**) allows you to select two different brightness modes. You can alter the two brightness settings in 'Configuration' settings and selecting the option for 'Dimmer'.

Select 'Power Save' mode to change the power save brightness. When there is no activity of the radio for 15 seconds, this lower brightness level will set until a button is clicked and the 'Turn on' setting will activate.

Select 'Turn On' mode to be the brightness for when the radio is active and in use.

Software Update

Will show here if a software update is available for the radio. If one is available, please select for the update to initiate.

Reset to default

Select this option to reset your radio and revert all of the settings and presets made.

Confirm that you would like to reset the unit and its settings by selecting 'Yes'.

Sleep Timer

To set a sleep timer, select the 'Sleep' button on the remote (**Rem.12**) and press repeatedly to switch between sleep times on the top right of the display screen.

There is an option between 15, 30, 60, 90, 120, 150, 180 minutes. Once this has been selected, the timer amount and a sleep image will show on the top right of the radio screen.

To turn Sleep off, simply keep selecting the 'Sleep' button until the function is removed from the display screen, or 'Turn Off' in configuration settings.

Remote Control App

To begin controlling your radio via a remote control app on your smart phone or tablet, you can download the 'Air Music Control App' in your device's app store.

Alternatively, go to Configuration Settings > Device for the following options:

- 1) **Rename (AirMusic)** - Select this to rename your device.
- 2) **AirMusic Control App** - Select this to show two QR codes - one for Apple devices, and one for Android. Scan the relevant code to download from the App store on your phone or tablet.

Once the app is downloaded, open the app and ensure that your radio is switched on and out of standby mode. The app should then automatically connect to your Majority internet radio. You can now begin adjusting settings and navigating around your radio.

Additional Setting Options

Time display - Select Analog or Digital

Language - Select your chosen language within the list

Display - Choose the display to be Colour or Monochrome

Power management - Select this to configure the radio to go into standby mode automatically after a set time of inactivity or if there is no WiFi signal. Select turn off to ignore this function.

Buffer - Configure the buffer time of the music playback: 2/4/8/seconds.

Weather - Activate/deactivate the weather forecast for the standby display. Choose your preferred temperature unit and enter your location. This will then display in the clock display on the standby screen every 10 seconds.

Local radio setup - Manually set up your location for Local radio rather than allowing the radio to Auto Detect.

Playback setup - Select the playback mode of the Media Centre: OFF, Repeat All, Repeat One or Shuffle.

Device - Default name for DLNA is "AirMusic". You can rename the device for DLNA setup.

Equaliser - Default equaliser is normal. You may change it to Flat, Jazz, Rock, Soundtracks, Classical, Pop, or News.

Resume when power on - Turn off the function for the radio to resume when powered on. Instead, the screen will remain in main menu.

Troubleshooting

Malfunction	Possible causes/measures
No power / function	<p>Check whether the power is switched on or off at the wall.</p> <p>Check whether the power adaptor is properly connected to power outlet or not.</p>
No sound	<p>Check whether unit is set to MUTE or not.</p> <p>Check whether MODE is correctly selected or not.</p> <p>Check whether cables are properly installed or not.</p>
Function disturbance	<p>Switch off and unplug the unit. Leave it for 2 minutes and switch it on again.</p>
WiFi not connecting	<p>Ensure WiFi mode is selected in settings and the correct passcode is being entered for the WiFi modem.</p> <p>Please try performing a factory reset and try reconnecting</p>
Bluetooth not connecting	<p>Ensure that you are on Bluetooth mode on the radio and your Bluetooth on your device is switched on. Select the Bluetooth device 'Majority King's' and you should now be able to play audio.</p>
CD player not working	<p>When on CD mode, simply press the eject button. Gently insert a CD and the CD player should automatically take the CD within the drive. The CD should then begin to play - do not click any remote buttons as this may interrupt it.</p>

Specifications

Specifications

Power Supply	DC 12V/2A input
Mode:	Internet, FM and DAB/DAB+
Aerial	Integral telescopic aerial
Dimension (WxHxD)	37.6 x 20 x 13.6cm
Net Weight	3.7kg

Warranty

All products come with a standard 12 month warranty. All items must be registered on www.majorityradios.co.uk for the warranty to be valid. Once on the web page, use the menu to find "Register Your Product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

1. **Read these instructions.**
2. Keep these instructions. Instructions are also available for download at www.majorityradios.co.uk
3. Heed all Warnings
4. Follow all instructions
5. Do not clean the apparatus near or with water
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during light storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel.
Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus.
13. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus. Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.
Do not open



Read all instructions carefully before use and keep for future reference



When servicing, use only identical replacement parts



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference

MAJORITY

www.majorityradios.co.uk