

MAJORITY

LYNFIELD

DVD PLAYER

LYN-DVD-BLK UK



Instructions Guide


Contents

Controls And Functions	1
What's In The Box?	5
Support	6
Instructions Guide	7
Getting Started	7
Operations	8
System Setup	9
Set-up Options: General	10
Set-up Options: Preference.....	12
Set-up Options: Audio.....	13
Set-up Options: Quality	14
Set-up Options: Speaker Setup	15
Set-up Options: Dolby Digital.....	16
CD Function	17
SD Card Function	18
Troubleshooting	19
Specification	20
Warranty	20
Safety Information	21

**3 YEAR
WARRANTY**


Watch video tutorials and register
your product for a FREE 3-year warranty
at www.majorityradios.co.uk

Front Panel

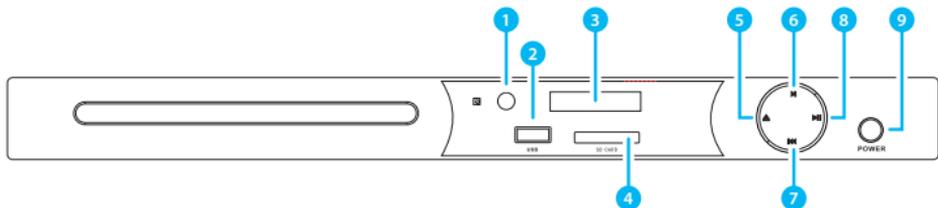


1. Sensor
2. USB slot
3. Display window
4. SD card slot
5. Open/Close
6. Next
7. Previous
8. Play/Pause
9. Power

Rear Panel

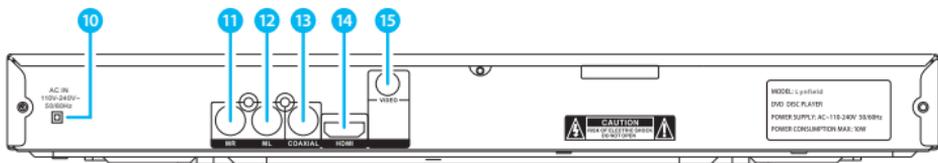

10. AC in
11. R Output
12. L Output
13. Digital signal COAXIAL output
14. HDMI output
15. Video output

Remote Control

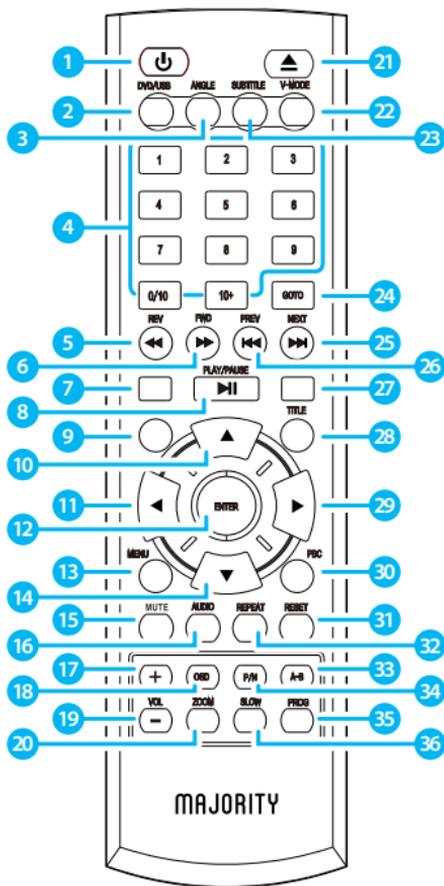

1. POWER/STANDBY

2. DVD/USB

Press to switch between DVD and USB mode

3. ANGLE

Press continuously on remote control to select various angles to view the same image. The media must be multi-angle encoded.

4. KEYPAD 0-10+

5. REWIND (<<)

Press to rewind through DVD disc playing. Press repeatedly to choose the speed of rewind: 2x, 4x, 8, 16x or 32x

6. FASTFORWARD (>>)

Press to fastforward through DVD disc playing. Press repeatedly to choose the speed of skip: 2x, 4x, 8, 16x or 32x

7. L/R

Press to switch sound between left speaker, right speaker or all speakers.

8. PLAY/PAUSE

Press to play or pause viewing

9. SETUP

Play or pause the playback

10. UP

Press to navigate up through settings

11. LEFT

Press to navigate left through settings

12. ENTER

Press to confirm selections and setting options

13. MENU

Press to return to main menu for DVD disc playing

14. DOWN

Press to navigate down through settings

15. MUTE

Press to mute sound. Press again to unmute.

16. AUDIO

Press to change the language option in menu settings

17. VOLUME (+)

18. OSD

Press repeatedly to view 4 different display screens: 1) Title, Chapter 2) Single Remain 3) Total Elapsed 4) Total Remain

19. VOLUME (-)

20. ZOOM

Open the menu of the DVD

21. OPEN/CLOSE

Press to open and close the disc tray of the DVD player

22. V-MODE

23. SUBTITLE

If the DVD is subtitle enabled, you can press this button to select between multiple subtitle languages

24. GOTO(+)

25. NEXT (>>I)

Press to choose next item or chapter

26. PREV (I<<)

Press to choose previous item or chapter

27. STOP

Press to stop disc playing. The DVD player will memorise stop time until PLAY key is pressed to resume play.

28. TITLE

Press to enter TITLE menu, if disc has multi-title encoded.

29. RIGHT

30. PBC

Skip backward/forward between chapters

31. RESET

32. REPEAT

Press once to repeat chapter, press twice to repeat title, press three times to turn off.

33. A-B

Press once to set start point A, press again to set end point B. After setting the section will repeat. Press button again to cancel repeat.

34. N/P

In STOP, press repeatedly to view NTSC, PAL, auto-display of the screen.

35. PROG

Press to set a play order for DVD chapters or CD tracks.

36. SLOW

Press to activate the Slow Motion feature on DVD mode. Press again to stop.

Remote Control Operation





Insert the batteries into the battery compartment.

Point the remote at the remote sensor in front of the player and make sure there are no obstacles in the way between the remote and the player. The distance between the remote and the sensor must not exceed 3m.

To prevent damage to the remote control, please remove the batteries when not in use for long periods of time.

Box Contents

1. Majority Lynfield DVD Player
2. Remote Control
3. RCA AV cable
4. Instruction Manual

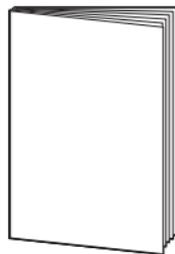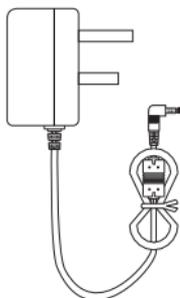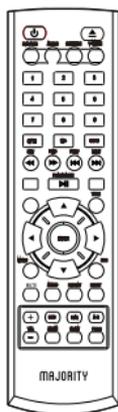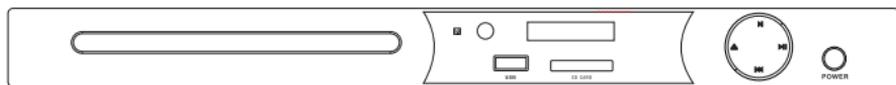

Support

Thank you for your purchase of the Majority Lynfield DVD player.

Please follow the guidance of the manual to set up your new purchase and begin enjoying its features.

If you require further assistance with your new DVD player, please contact our support team on the Majority website:

<https://www.majorityradios.co.uk/support>

Getting Started

Setting Up

Connect the power plug of the DVD player to a wall outlet. The power indicator on the front panel will illuminate red.

Press the On/Off on the front panel or the Remote Control to start the DVD player. The power indicator on the front panel will illuminate green.

Follow the below guidance for cable connections to get your DVD player set up:

Cable Connections

1a. Connect a RCA cable from the Video AUX Left Output on the back panel of the DVD player to the RCA input on your TV.

1b. Connect a HDMI cable between the HDMI Output on the back panel of the DVD player to the HDMI input on your TV.

2. If you have a stereo amplifier, connect a coaxial cable between the Coaxial Output on the back panel of the DVD player to the coaxial input on your stereo.

3. Control the playback via the buttons of the Remote Control.

Operations

DVD Operation

Press the Open/Close button on the front panel or on the Remote Control and place a DVD disc on the Disc Tray.

Press the Open/Close button again to close.

The DVD player will read the DVD disc and begin the playback.

Control the playback via the buttons of the Remote Control.

USB Operation

Insert a USB unit into the USB Port on the front panel of the DVD player.

Press the DVD/USB button on the Remote Control to enter the USB source. The DVD Player will read and display the file list of the USB unit.

Browse the file list by pressing the ▲/▼/◀/▶ buttons on the Remote Control. Select a file by pressing the OK button of the Remote Control.

The following file formats can be played: AVI, MPG, TS/TRP, JPG, JPEG, MP3, WMA. If a file is invalid, "not supported" will display.

Maximum storage capacity is 32GB and each folder up to a maximum 5000.

System Setup

Press the SETUP button on the Remote Control to open up the setup of the DVD Player.

There are six different menus in the setup: General, Preference, Audio, Quality, Speaker and Dolby. Follow the instructions in the individual paragraphs for a choice of setup options:

General System Setup

Language Preference Setup

Audio Setup

Video Setup

Speaker Setup

Digital Dolby Setup

Please note:

Press the ▲/▼/◀/▶ button to browse between sub-menu's.

To access the sub-menu, press the ENTER button to confirm entry. Now browse between the settings in that sub-menu.

To close the setup of the DVD player, press SETUP on the Remote Control.

Set-up Options: General System

1. Press the ▲/▼/◀/▶ buttons on the Remote Control to open the "System" menu.
2. Eight Submenus will appear that you can select between. Press the ▲/▼ buttons on the remote control to circle between the sub-menus:

a) TV System

This product supports outputs of various systems, including AUTO, PAL, PAL60, NTSC. If your TV has NTSC or PAL, the screen will blink and become colourless when wrong system is selected. If this is the case, press the N/P button to return to normal.

b) Auto-play

Choose between On/Off.

c) HD Output - (Sch)

You can choose the following resolution levels from the HDMI output: 720P, 1080i, 1080P.

d) Video

Set up video options.

e) TV Type - (SCH)

Different values will show here depending on your TV set:

- 4:3 PBS - When the unit connects to the normal TV set, the wide-screen image shows on the full screen, but some part is cut off.
- 4:3 LB - When the unit connects to the normal TV set, the wide-screen image shows and black bars appear on the top and bottom of screen
- 16:9 - Use this item when the unit is connected to the widescreen TV set

f) Password

Open the sub menu for the password settings. Note: The default password is 8888

g) Rating (Parental Guidance) (SCH)

Select to control parental control settings. Any disc with the parental level higher than the set level will not be played.

h) Default

Reset the settings to the factory settings

Set-up Options: Language Preference

1. Press the ▲/▼/◀/▶ buttons on the Remote Control to open the "Language Preference" menu.

2. Five different submenus will appear on the menu. Press the ▲/▼ buttons on the Remote Control to circle between the sub-menus:

- a) **OSD Language** - Select language for OSD setup
- b) **Audio Language** - Select audio language if the DVD offers language options
- c) **Subtitle Language** - Turn on/off subtitles and choose the language.
- d) **Menu Language** - Select SETUP menu language
- e) **DIVX [R] VOD** - Displays a register code to register your DivX product on www.divx.com/vod

Set-up Options: Audio

1. Press the ▲/▼/◀/▶ buttons on the Remote Control to open the "Audio" menu.
2. Five different submenus will appear on the sub-menus. Press the ▲/▼ buttons on the Remote Control to circle between the sub-menus:
 - a) **Audio Out** - Select PCM or Raw for your Optical/ Coaxial cable connections
 - b) **HDMI Audio** - Choose between AUTO or PCM.
 - c) **Mic Setup** - Select AUTO/OFF
 - d) **Key** - Select your desired KEY option
 - e) **Echo** - Select your desired ECHO option
 - f) **Mic vol** - Select your desired MIC VOL option
3. When you enter a sub-menu, a number of options will appear for the entered sub-menu.

Set-up Options: Video

1. Press the ▲/▼/◀/▶ buttons on the remote control to open the "Video" menu.
2. Five different submenus will appear on the menu. Press the ▲/▼ buttons on the remote control to scroll to browse between the sub-menus:
 - a) **Brightness** - Select your desired brightness option
 - b) **Contrast** - Select your desired contrast option
 - c) **Hue** - Select your desired hue option
 - d) **Saturation** - Select your desired saturation option
 - e) **Sharpness** - Select your desired sharpness option
3. When you enter a sub-menu, a number of options will appear for the entered sub-menu.

Set-up Options: Speaker Setup

1. Press the ▲/▼/◀/▶ buttons on the remote control to open the 'Speaker' menu (**Rem. 7, 24, 25, 28**).
2. Five different submenus will appear on the menu. Press the ▲/▼ buttons on the remote control to scroll to browse between the sub-menus to select the stereo output:

a) Downmix mode

- Stereo: sets audio output to the stereo output
- L-Mono: sets audio output to the mono-left channel
- R-Mono: sets audio output to the mono-right channel
- Mix-Mono: sets audio output to the Mix mono channel

b) Subwoofer

Select to reduce the bass and treble, and to create a fine detailed sound. This mode is recommended for reduced sound to avoid disturbance for night time viewing.

c) Center Delay

Select to adjust the centre delay between a selection of options.

d) Rear Delay

Select to adjust the rear delay between a selection of options.

e) Front

Choose between setting the Front as large or small.

Set-up Options: Dolby Digital

1. Press the ▲/▼/◀/▶ buttons on the remote control to open the 'Digital' menu (**Rem. 7, 24, 25, 28**).

2. Three different submenus will appear on the menu. Press the ▲/▼ buttons on the remote control to scroll to browse between the sub-menus to select the stereo output:

a) OP Mode

Select OP Mode to choose between LINE OUT or RF REMOD.

b) Dynamic Range

Select to choose your desired option for the dynamic range: full, 6/8, 4/8, 2/8, Off.

c) Dual Mono

Select to choose between the following Dual Mono options:

- Stereo: sets audio output to the stereo output
- L-Mono: sets audio output to the mono-left channel
- R-Mono: sets audio output to the mono-right channel
- Mix-Mono: sets audio output to the Mix mono channel

CD Function

Place a CD disc into the CD tray and the player will begin to search. Once processed and set up, the player will play the first song on the disc. The TV screen will display "Track 01/XX" to indicate this.

A variety of discs and file formats can be read including MP3 and JPEG:

MP3 Discs

If inserting and playing a MP3 disc, you can enter different menus by pressing the PROG button on the remote:

a) File List

Select the files to be played by using the ▲/▼ buttons to scroll and the ENTER button to make your selections.

b) Folder

Display the menu first and then use ▲/▼/◀/▶ buttons to select subdirectory and music.

JPEG Picture Discs

Once the disc is inserted into the machine, you can select the picture to view with the number keys on the remote control followed by pressing the ENTER button. Alternatively, use the ▲/▼/◀/▶ buttons to scroll.

SD Card Function

Insert an SD card via the SD card slot (**Ref.4**).

Scroll through available files on the SD card by using the ▲/▼/◀/▶ buttons on the remote control. Select the file you would like to view with the ENTER button (**Ref.12**).

Troubleshooting

Malfunction	Possible causes/measures
No power / function	<p>Check whether the power is switched on or off at the wall.</p> <p>Check whether the power adaptor is properly connected to power outlet or not.</p>
No video	<p>Make sure that the video cables are connected correctly.</p> <p>Reset the setup of the DVD player.</p> <p>Check that the input selection on the TV is correct.</p>
No audio	<p>Make sure that the audio cables are connected correctly.</p> <p>Make sure that the coaxial connected stereo is powered on.</p> <p>Reset the setups of the DVD player.</p>
Distorted video	<p>Clean DVD disc from dust/dirt</p> <p>The playback is fast winding backward/forward.</p>
Unable to play	<p>Place a DVD disc in the disc tray.</p> <p>Place the disc in on the correct side up</p> <p>Clean DVD disc from dust/dirt</p> <p>Close the setup of the DVD player.</p> <p>Check that the file is compatible with the unit.</p>
Remote Control does not work	<p>Aim the Remote Control towards the front panel of the DVD player.</p> <p>Use the Remote Control closer to the DVD player.</p> <p>Check the battery level of the batteries</p>

Specifications

Specification

Power Supply	AC 110-240V 0.5A
Frequency Response	~ 50/60 Hz
Power Consumption	<25W
Compatible Formats	DVD: DVD, DVD-R, SVCD, HDCD, VCD, CD, CD-RW and Multi-Region AUDIO: Mp3, WMA, CD Audio, CD-R-RW, CD PHOTO: Jpg, Jpeg, CD Photo
Output	Coaxial/R.L/Video/Salida HDMI
Dimension (WxHxD)	36 x 17,5 x 3.8 cm 1.14 kg

Warranty

All products come with a standard 12 month warranty. All items must be registered on www.majorityradios.co.uk for the warranty to be valid. Once on the web page, use the menu to find "Register Your Product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

1. Read these instructions.

- Keep these instructions. Instructions are also available for download at www.majorityradios.co.uk
- Heed all Warnings
- Follow all instructions
- Do not clean the apparatus near or with water
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during light storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel.
Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
- No naked flame sources, such as lit candles, should be placed on the apparatus.
- Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus.

Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste.

Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.
Do not open



Read all instructions carefully before use and keep for future reference



When servicing, use only identical replacement parts



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference

MAJORITY

www.majorityradios.co.uk