

MAJORITY

SHELFORD II

Portable Digital & FM Radio

SEL-DAB-RED-2 UK




Instructions Guide

Controls And Functions	1
What's In The Box?	3
Support	4
Instructions Guide	5
Basic Operation	5
DAB/DAB+ Radio.....	6
DAB/DAB+ Presets	7
Station Information for DAB Radio	8
FM Radio.....	9
FM Radio Presets	11
Station Information for FM Radio	12
Clock & Date Settings.....	13
Dual Alarm Settings	15
Alarm Functions.....	16
Other Functions	17
Troubleshooting	19
Specifications	20
Warranty	20
Safety Information	21

**3 YEAR
WARRANTY**

Watch video tutorials and register
your product for a FREE 3-year warranty
at www.majorityradios.co.uk


Front View

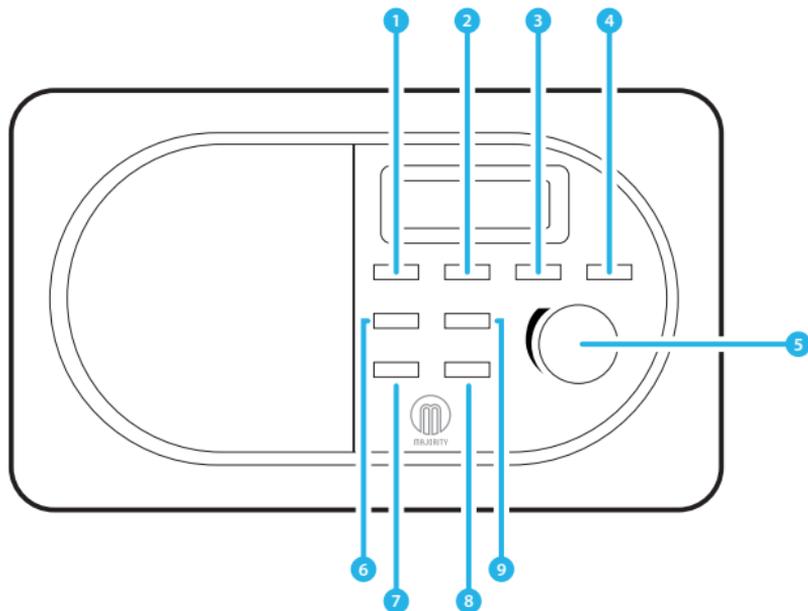

1. Standby/Mode
2. Scan/Snooze
3. Preset
4. Info/Menu
5. Volume

6. Previous
7. Alarm/Sleep
8. Next
9. Volume
10. Enter

Rear View

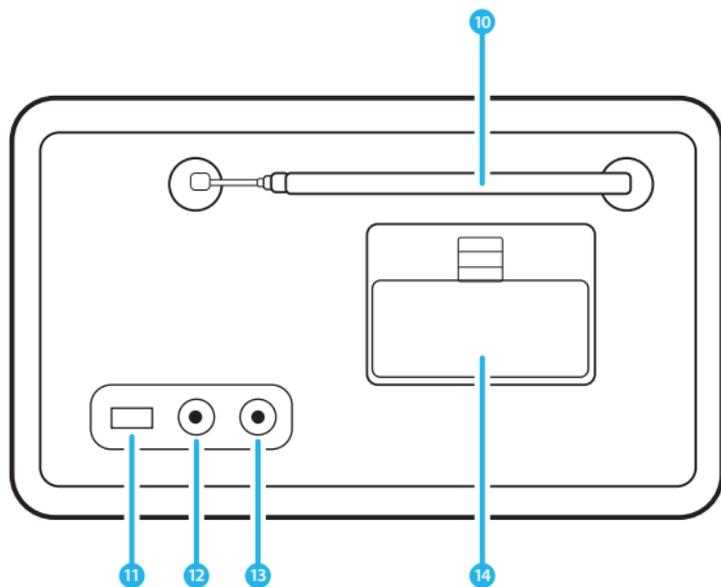

- 10. Antenna
- 11. Off/On
- 12. Earphones Jack
- 13. DC 5V
- 14. Battery Compartment

Box Contents

1. Majority Shelford II DAB / DAB+ / FM Radio Clock
2. UK Standard Plug DC 5V, 1A Power Supply
3. Instructions Guide



Support

Thank you for your purchase of the Majority Shelford II.

Please follow the guidance of the manual to set up your radio and enjoy its fantastic variety of stations and features.

If you require further assistance with your new radio, please contact our support team on the Majority website:

<https://www.majorityradios.co.uk/support/>

Basic Operation

Please note all (Ref.) refer to Page 1 Controls and Functions mapping guide.

Plug the connector into the back of the system labelled DC 5V (**Ref.12**) and the power supply into the mains. Alternatively, insert 4 x C batteries into the battery compartment for portability.

Ensure the antenna (**Ref.14**) is extended as far as possible so that you can rotate it. This will enable you to get the best signal you can. At the back of the radio, switch the ON/OFF toggle to "ON" (**Ref.10**).

Press the 'Standby/Mode' button to turn on the unit (**Ref.1**). When DAB Radio is activated for the first time, you may need to scan for available stations if scanning does not automatically start. To do this, press the 'Scan/Snooze' button (**Ref.2**) for the scan to start. To scroll through the stations, use the 'Previous' or 'Next' (**Ref.5/6**) buttons. Press the 'Enter' button (**Ref.9**) to listen to a station.

In DAB mode, the radio will synchronize with the time and date of the station.

To change the mode, press the 'Standby/Mode' button (**Ref.1**).

Standby

To switch your radio to Standby mode, press and **hold** the Standby/Mode button. To turn on the radio, simply press the Standby/Mode button.

DAB/DAB+ Radio

Press the 'Standby/Mode' button (**Ref.1**) to switch to DAB/DAB+ Radio. On first use it will automatically scan all stations and save them.

Fully extend the antenna (**Ref.14**).

To auto scan, press the 'Scan/Snooze' button (**Ref.2**) and then release. This will start scanning up the frequency band and store all stations that have good signal up to 240 MHz. After searching has finished it will automatically play the first station stored.

To browse through all stations that have been stored, use the 'Previous' or 'Next' buttons (**Ref.5/6**) to scroll through them. When on the chosen station, press the 'Enter' button (**Ref.9**) to begin listening to that station.

The radio will display station information when you press the 'Info/Menu' button (**Ref.4**). Press multiple times to view all information available (See page 10).

When you turn the radio on again after it switching off, it will automatically tune to the same station (DAB or FM) that was last selected.

DAB/DAB+ Presets

How to store a preset DAB station

To be able to quickly access your favourite DAB stations, you can preset the stations. Up to 10 different preset stations can be set for you to browse between.

To store a station as your preset, it is best to be listening to the station at the time.

Once listening to the station, press and **hold** the 'Preset' button (**Ref.3**). The screen will then display "Preset In [1] stored" will show on the display. To set the station as preset 1, simply press 'Enter' (Ref.9) to confirm your choice.

To set the station as preset number 2 or above, press the 'Previous/Next' buttons (**Ref.5/6**) to change the "[1]" to the number you want to store the station as. Then press 'Enter' button (**Ref.9**) to save. The display will then show "Preset [x] stored".

How to play a preset radio station

To play your preset radio stations, press the 'Preset' button (**Ref.3**) to enter the preset catalogue.

Use the 'Previous' or 'Next' buttons (**Ref.5/6**) to scroll through your preset stations from 1-10.

Once you have found the chosen preset station you wish to play, press the 'Enter' button (**Ref.9**) to select your choice. The station will now begin to play.

Station Information for DAB Radio

When you are listening to a DAB/DAB+ radio station with good signal, you can press the 'Info/Menu' button (**Ref.4**) repeatedly to show the different programme information.

Signal Strength: Displays a signal bar with the strength of the current station.

Bit Error Rate: Provides details of the signal error rate.

Channel and Frequency: Displays the station's transmission channel number and frequency.

PTY (Programme Type): Shows the type and description of the program provided by the DAB station.

Time and Date: Displays the time and date information provided by the broadcaster.

Bit Rate: The data rate which the signal is being transmitted.

DAB indication: Indicates DAB mode.

Dynamic Label Segment (DLS): Displays scrolling text information supplied by the broadcaster.

FM Radio

Press the 'Standby/Mode' button (**Ref.1**) multiple times to switch between DAB and FM. The first time you do this, the FM frequency "87.5 MHz" will be displayed on the screen.

Fully extend the antenna (**Ref.14**).

To scan for the available stations with good signal, press and release the 'Scan/Snooze' button (**Ref.2**) for the radio to begin scanning up the frequency band. The next available station will then begin to play.

To scan down the frequency band, press and **hold** the 'Scan/Snooze' button (**Ref.2**) for a few seconds.

The radio will display station information when you press the 'Info/Menu' button (**Ref.4**). Press multiple times to view all information available (See page 11).

To tune a specific frequency manually

To listen to a specific frequency use the 'Previous' or 'Next' buttons (**Ref.5/6**) to search forward or back.

FM Scan Setting

Choose between scanning strong and weak signals (All) or only the strong stations (Only).

Press and **hold** the 'Info/Menu' button (**Ref.4**). To make your choice, use the 'Previous' or 'Next' buttons (**Ref.5/6**) to choose your option.

Select "Scan Setting" and press the 'Enter' button (**Ref.9**).

Use the 'Previous' or 'Next' buttons (**Ref.5/6**) to choose between "All" or "Only". Press the 'Enter' button (**Ref.9**) to confirm your choice.

Mono and Stereo

In working mode, press the 'Enter' button (**Ref.9**) multiple times to switch between 'Set to Mono' or 'Set to Stereo'.

FM Radio Presets

How to store a preset FM station

To be able to quickly access your favourite FM stations, you can preset the stations. Up to 10 stations can be set for you to browse between.

Once listening to the station, press and hold the 'Preset' button (**Ref.3**). The screen will then display 'Preset In [1] stored' will show on the display to show the empty preset 1. To set the station as preset 1, simply press 'Enter' (Ref.9) to confirm your choice.

To set the station as preset number 2 or above, press the 'Previous' or 'Next' buttons (**Ref.5/6**) to change the "1" to the number you want to store the station as. Then press 'Enter' (**Ref.9**) to save.

Once the station is saved as a preset, the display will show "Preset [x] stored".

How to play a preset radio station

To play your preset radio stations, press the 'Preset' button to enter the preset catalogue (**Ref.3**).

Use the 'Previous' or 'Next' buttons (**Ref.5/6**) to scroll through your preset stations from 1-10.

Once you have found your chosen preset station you wish to play, press the 'Enter' button (**Ref.9**) to select your choice. The station will now begin to play.

Station Information for FM Radio

When you are listening to a FM station with good signal, you can press the 'Info/Menu' button (**Ref.4**) repeatedly to show the different programme information.

Programme Type: Displays a description of the type of programme provided by the broadcaster.

Signal Strength: Displays a signal bar with the strength of the current station.

Time and Date: Displays the time and the date.

Frequency: Displays the station's transmission frequency.

Audio Type: Displays the audio type of the station you are listening to. It will either be stereo or mono.

Radio Text: Displays scrolling text information supplied by the broadcaster.

Clock & Date Settings

Once the radio has been put into DAB mode, the time and date should automatically set. If this does not happen or you wish to alter the time and date, follow the below guidance:

Manually Setting the time

Ensure the unit is turned on.

To enter radio settings, press and **hold** the 'Info/Menu' button (**Ref.4**).

Use the 'Previous' or 'Next' buttons (**Ref.5/6**) to scroll through to "Time/Date" and press the 'Enter' button (**Ref.9**) to confirm the choice.

Once this option is selected, the hour will flash on the display screen. You can now alter the time hour by pressing the 'Previous' or 'Next' buttons (**Ref.5/6**) until the required hour is displayed. To confirm the hour, press the 'Enter' button (**Ref.9**).

The minutes will flash on the display screen. Press the 'Previous' or 'Next' buttons (**Ref.5/6**) until the required minute is displayed.

To confirm the minute, press 'Enter' (**Ref.9**).

The time is now set and you will be able to alter the date in the next step.

Manually Setting the Date

The date can be changed straight after changing the time.

The year will flash on the display screen. To change the date year, press the 'Previous' or 'Next' buttons (**Ref.5/6**) until the required year is displayed.

To confirm the year, press the 'Enter' button (**Ref.9**).

The month will flash on the display screen. Use the 'Previous' or 'Next' buttons (**Ref.5/6**) until the required month is displayed.

To confirm the month, press 'Enter' (**Ref.9**).

The day will then flash on the display screen. Use the 'Previous' or 'Next' buttons (**Ref.5/6**) until the required date is displayed.

To confirm the date, press 'Enter' (**Ref.9**).

Dual Alarm Settings

1. Press the 'Alarm/Sleep' button (**Ref.8**) once for Alarm 1 or twice for Alarm 2. Press the 'Enter' button (**Ref.9**) to confirm the alarm you wish to set.
2. Once alarm 1 or 2 are selected, OFF will display on the screen. To turn the alarm on, use the 'Next' button (**Ref.6**) to make "ON" flash on the display. Press the 'Enter' button (**Ref.9**) to confirm the alarm switch on.
3. The hour digits for the alarm will flash. To set the hour you want the alarm to sound, press the 'Previous' or 'Next' buttons (**Ref.5/6**) to browse to the hour and press the 'Enter' button (**Ref.9**) to confirm your choice.
4. The minutes of the alarm are now able to be set. Using the 'Previous' or 'Next' buttons (**Ref.5/6**), scroll up and down the minutes and press the 'Enter' (**Ref.9**) button to confirm.
5. You can now choose whether you would like to set the alarm as 'Once/Daily/Weekdays/Weekend' by using the 'Previous' or 'Next' buttons to scroll through. Press 'Enter' to confirm choice.
6. Once the alarm time is set, you can change the alarm volume by pressing the 'Previous' or 'Next' buttons (**Ref.5/6**) to choose the noise level. Press the 'Enter' (**Ref.9**) button to confirm.
7. You can now choose the alarm tone sound. Press the 'Previous' or 'Next' buttons (**Ref.5/6**) to change between which sound you would like: Alarm, DAB or FM Radio. Press 'Enter' (**Ref.9**) to confirm.

Alarm Functions

To Cancel Alarm 1 or Alarm 2

To cancel the alarm, press the 'Alarm/Sleep' button (**Ref.8**) once for Alarm 1 or twice for Alarm 2. Press the 'Enter' button (**Ref.9**) to confirm.

To turn the Alarm on or off, use the 'Previous' or 'Next' buttons (**Ref.5/6**) so that "OFF" is flashing and press the 'Enter' button (**Ref.9**) to confirm.

Snooze/Switch off Alarm when sounding

When the alarm sounds, press the 'Scan/Snooze' button (**Ref.2**) to snooze the alarm for 9 minutes. The radio will go into standby mode.

To turn the alarm off completely when sounding, press the 'Standby/Mode' button (**Ref. 1**).

If you do not turn the alarm off or put it on snooze, the alarm will sound for 9 minutes before it turns off automatically.

Other Functions

Sleep setting

This enables you to programme the radio to switch off at a selection of set times up to 120 minutes from activation.

Press and **hold** the 'Alarm/Sleep' button (**Ref.8**).

Choose from 120/90/60/45/30/15/5 mins or OFF using the 'Previous' or 'Next' buttons (**Ref.5/6**).

When your choice is displayed, press the 'Enter' button (**Ref.9**). The system will automatically start the timer.

To turn the sleep timer off, follow the above instructions and choose "OFF" from the choices.

Once the timer has been set, the minutes will countdown on the display screen. For example, if set to turn off in 5 minutes, "S5" will flash, counting down to "S0" when the radio will go into standby mode.

System Reset

To reset your radio and erase all settings and preset options, perform a factory reset. This would be advisable if you are having any functionality issues with your radio.

To perform a factory reset, press and **hold** the 'Info/Menu' button (**Ref.4**).

Use the 'Previous' or 'Next' buttons (**Ref.5/6**) to highlight "Factory reset" and press the 'Enter' button (Ref.9).

The display screen will then show "Factory Reset?". Use the 'Previous' or 'Next' buttons (Ref.5/6) to choose "Yes" or "No". Press the 'Enter' button (**Ref.9**) to confirm.

System Version

Press and **hold** the 'Info/Menu' button (**Ref.4**).

Use the 'Previous' or 'Next' buttons (**Ref.5/6**) to select "System Version". Press 'Enter' (**Ref.9**) to confirm.

Standby

To place the music system in standby, press and hold the 'Standby/Mode' button (**Ref.1**). To turn off fully, switch it off at the back of the unit (**Ref.10**) and at the mains. The cord must be out of reach of children.

Observation	Potential Cause/Solution
No sound	The station is not tuned in. Fine tune the station. The volume is set to a low position. Increase the volume. Headphones may be connected. Disconnect the headphones.
Buttons are not working	Turn off the unit and turn on after a few seconds.
FM: Static sound DAB: Burbling/ intermittent cut-out	Signal reception is low. Adjust the aerial or move the unit to a stronger signal location. Re-scan stations.
Sound is distorted	The volume is too high. Adjust the volume control.
Desired station not found	Weak signal. Use the manual tune function.
Display shows "No Service"	There is no DAB coverage in your area, or poor reception. Adjust the position of the aerial, or move the unit to a stronger signal location.
Display is blank	This may occur if the broadcaster changes the label of a service or removes a label while tuned. The radio will try to retune or perform a scan.
Time and Date not setting automatically	For the time and date to set automatically you need to turn on the system and switch to DAB radio and let this scan. Then press the 'Power Mode' button and the will go into standby. The date and clock will update automatically.

Specifications

Power input:	UK DC 5v
Mode:	FM(87.5MHz – 108MHz) DAB / DAB+ 174-240MHz
Output Connector:	Earphone jack
Aerial:	Integral telescopic aerial

Power Supply and Batteries

The unit is powered and charged by UK Standard Plug DC 5v. The unit is also portable when powered by 4 x C Batteries (Not Supplied). These can be inserted into the battery compartment on the back of the unit (**Ref.13**).

Warranty

All products come with a standard 12 month warranty. All items must be registered on www.majorityradios.co.uk for the warranty to be valid. Once on the web page, use the menu to find “ register your product”. You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

1. Read these instructions.

- Keep these instructions. Instructions are also available for download at www.majorityradios.co.uk
- Heed all Warnings
- Follow all instructions
- Do not clean the apparatus near or with water
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during light storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
- No naked flame sources, such as lit candles, should be placed on the apparatus.
- Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus.

Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste.

Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.
Do not open



Read all instructions carefully before use and keep for future reference



When servicing, use only identical replacement parts



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference

MAJORITY

www.majorityradios.co.uk