

MAJORITY

W I L L I N G H A M

DIGITAL RADIO & MUSIC SYSTEM

WIL-CDAB-WAL



Instructions Guide

Contents

What's in the Box?	1
Controls And Functions	2
Support	6
Instructions Guide	7
Navigation Settings	7
Basic Operation	8
DAB/DAB+ Radio	10
DAB Radio Settings	14
FM Radio	15
FM Radio Settings	19
Bluetooth Mode	20
AUX-In Mode	21
CD Player	22
USB Playback	24
Dual Alarm Setting.....	25
Sleep Timer Settings	27
System Menu Settings	28
Troubleshooting	31
Specifications	32
Warranty	32
Safety Information	33

**3 YEAR
WARRANTY**

Watch video tutorials and register
your product for a FREE 3-year warranty
at www.majorityradios.co.uk

 
Box Contents

1. Majority Willingham
2. Remote Control
3. Power Adapter
4. Instructions Guide




Controls And Functions

Top View (Control Panel)

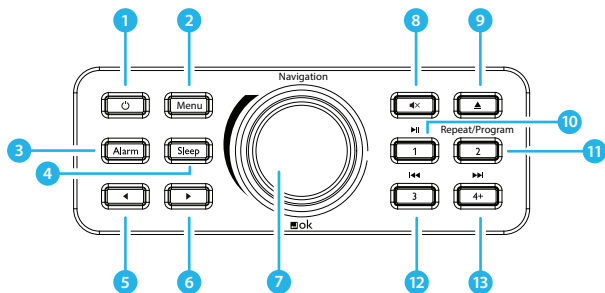

1. Power/Mode
2. Info/Menu
3. Alarm
4. Sleep
5. Previous
6. Next
7. Navigation/Volume/OK/ Stop dial
8. Mute
9. CD eject/load
10. Play/Pause - CD mode and Preset 1 button
11. Repeat/Program - CD mode and Preset 2 button
12. Rewind - CD mode and Preset 3 button
13. Fastforward - CD mode and Preset 4+ button

 
Front View

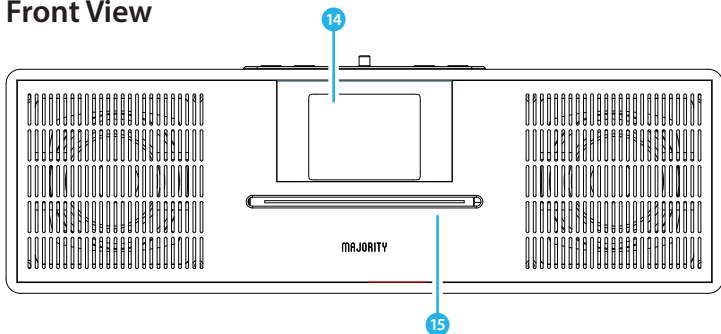

14. Display screen

15. CD port

 Back View

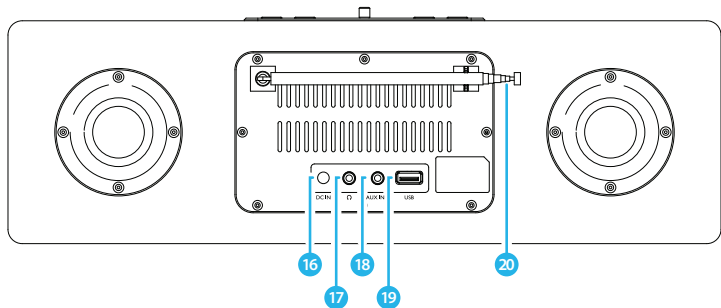

16. DC power input

17. Headphone port

 
18. Aux In

19. USB Port

20. Antenna

Controls And Functions

Remote Control

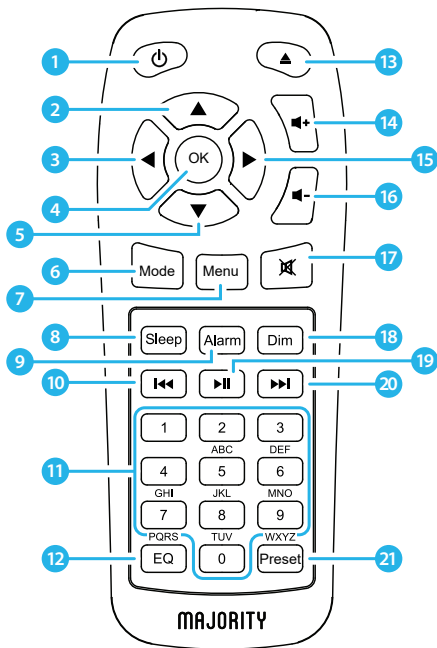

- 1. Power On/Standby**
Switch the unit between on and Standby mode
- 2. Up button**
- 3. Left button**
Navigate left/Go back a track in CD mode.
- 4. OK button**
Select options and settings with the OK button/ Stop in CD mode
- 5. Down button**
- 6. Mode button**
Takes to the mode selection screen to select chosen mode options
- 7. Menu button**
Select to open menu setting options
- 8. Sleep button**
Press to begin setting a sleep timer.
- 9. Alarm button**
Enter alarm settings
- 10. Rewind button**
CD Mode: Rewind track
- 11. 0-9/A-Z Keypad**
Type numbers and letters
- 12. EQ (Equaliser) button**
Select to choose equaliser settings
- 13. CD Eject button**
Select to eject a CD from the CD player.
- 14. Vol +**
Increase volume
- 15. Right button**
Navigate right/Go forward a
- 16. Vol -**
Decrease volume
- 17. Mute button**
Select to mute and unmute sound track in CD mode.
- 18. Dimmer button**
Press dimmer repeatedly to go through 3 dimmer options.
- 19. Play/Pause**
Use in CD mode to Pause/Play CD
- 20. Fastforward button**
CD mode: Fastforward track
- 21. Preset**
Press and hold button for 2-3 seconds to set a preset. Simply press to recall preset stations.

Support

Thank you for your purchase of the Majority Willingham radio.

Please follow the guidance of the manual to set up your new purchase and begin enjoying its features.

If you require further assistance with your new radio, please contact our support team on the Majority website:

<https://www.majorityradios.co.uk/support>

Navigation Settings

Power/Mode button: This should be used to turn your radio on and into Standby. To put into standby, press and **hold** the button to display the time, date and any settings set such as alarms.

To turn off standby, press the Standby button to be taken to the home screen, or last function that you were using before putting into standby.

When the radio is switched on to working mode, press the button to display the mode home screen with available modes.

Info/Menu button: When on DAB or FM mode, press the button (do not hold) multiple times to scroll through the station information.

Press and **hold** the button to display the radio Menu settings.

Whilst creating settings, press the button to go back a step.

Navigation/OK/Volume Dial and Stop button in CD mode:

Rotate the dial clockwise or anticlockwise to scroll through choices and press down the dial to confirm selections.

This dial will allow you to change the volume when you are on the radio station playing screen.

CD functionality buttons: When in CD mode, use the CD functionality buttons on the unit to eject the CD, stop, pause/play, repeat/program, rewind and fastforward.

Basic Operation

Please note that the instructions within this manual will refer to the radio button number e.g (**Ref.*X***) in accordance to the diagrams on pages 2-3 or the remote (**Rem.*X***) on pages 4-5.

Starting up your radio

Plug the adaptor connector into the back of the system labelled 'DC in' (**Ref.16**) and turn the power on from the mains. The radio will begin to power up and display a 'MAJORITY' screen.

Ensure the antenna (**Ref.20**) is extended as far as possible. This will enable you to get the best signal you can before going to DAB and FM modes and beginning to scan for available stations.

The radio will then begin a full scan for available digital DAB stations and will display a scanning bar showing the amount of stations found. Once the scan is complete, the first available digital radio station will automatically begin to play.

You can then select the chosen default language on the display screen. Scroll through using the navigation dial (**Ref.7**) and select the chosen language by pressing down the dial.

To change the mode of the radio from DAB mode, press the Power/Mode button (**Ref.1**) to enter the mode home screen with available modes. Use the Navigation/OK dial to scroll between the available modes and select the mode by pressing down the dial (**Ref.7**)

Standby Mode

To place the radio into standby, press and **hold** the Power/Mode button (**Ref.1**) for 2-3 seconds and a standby screen showing the date, time and alarm settings will display.

To take the radio off standby, press the Power/Mode button (do not hold).

To switch the radio off completely, it is advisable to place the radio into standby mode and then switch the radio off at the mains.

DAB/DAB+ Radio

Press the Power/Mode button (**Ref.1**) (do not hold the button) or (**Rem.6**) to open the mode home screen. Select 'DAB/DAB+' on the main display screen by browsing with the Navigation dial (**Ref.7**) and selecting the mode by pressing down the dial or use the navigation buttons on the remote (**Rem.2/3/4/5/15**).

On first use of DAB, the available DAB stations will have already been scanned and saved. If the radio has not automatically scanned or you wish to rescan for available stations, press and **hold** the Info/Menu button (**Ref.2**), followed by selecting the "Full Scan" option. The radio will now begin scanning for DAB stations and will show 'Scanning' on the display screen. It will display how many stations have been found as the search continues.

Once all of the available stations have been found, the first available station will play. To scroll through the available stations, press the '<' button (**Ref.5**) to view the station list. Scroll through the available stations with the Navigation dial (**Ref.7**) or the '<' and '>' button on the remote (**Rem.3/4**) and highlight the chosen station. Select the station you wish to listen to by pressing down the dial.

When you have selected a station, the screen will display the station and begin to play. To choose the previous or next station, go back to the list and use the Navigation dial or the remote navigation buttons to scroll accordingly.

DAB/DAB+ Preset Stations

Pre-setting your favourite DAB/DAB+ stations

Up to 10 DAB/DAB+ stations can be preset for easy navigation. To create a preset, you must be listening to the chosen station.

Presetting from the unit

From the unit, you can easily set preset number 1-3 by pressing and **holding** one of the Preset 1-3 buttons (**Ref.10/11/12**). Please ensure that the button is held for 2-3 seconds rather than pressed. The screen will then display "Preset X Saved".

To set preset number 4+, press and **hold** the Preset 4+ button (**Ref.13**) to open the 'Save to Preset' screen. Please ensure that the button is held for 2-3 seconds rather than pressed. Use the navigation dial to scroll through the preset numbers and select the preset number by pressing down the dial (**Ref.7**)

Presetting from the remote

When you have found your desired station, press and **hold** the 'Preset' button on the remote (**Rem.21**) for 2-3 seconds to go to the 'Save to Preset' screen.

Use the '<' and '>' buttons on the remote (**Rem.3/15**) to scroll to the chosen preset number you wish to save the station to. Select the preset number by pressing the OK button (**Rem.4**)

Please note: To remove a preset option that has been made, simply preset another radio station over the preset number.

Recalling your preset DAB/DAB+ stations

Recalling presets from the unit

From the unit, you can easily recall preset number 1-3 by pressing one of the Preset 1-3 buttons (**Ref.10/11/12**). Please ensure that the button is being pressed and released, rather than held. The screen will then begin playing the selected station.

To recall preset number 4+, press the Preset 4+ button (**Ref.13**) to open the 'Preset Recall' screen. Use the navigation dial to scroll through the preset numbers and select the preset station to play by pressing down the dial (**Ref.7**)

Recalling presets from the remote

To recall your preset stations via the remote control, press (do not hold) the Preset button (**Ref.21**) to go to the 'Preset Recall' screen.

Use the '<' and '>' buttons on the remote (**Rem.3/15**) to scroll to the chosen preset number you wish to play. Select the preset number by pressing the OK button (**Rem.4**) and the station will begin to play.

DAB/DAB+ Station Information

Whilst playing a DAB/DAB+ station, the following station information can be viewed by pressing the 'Menu/Info' button repeatedly (**Ref.2**) on the unit.

Dynamic Label Segment (DLS): Displays text information supplied by the broadcaster.

PTY (Programme Type): Shows the type and description of the programme provided by the DAB station.

DAB Indication: Indicates DAB mode.

Channel and Frequency: Displays the station transmission channel number and frequency.

Signal Error/Strength: Provides details of the station signal strength.

Bit Rate: The data rate which the signal is being transmitted.

Date and Day: Displays the date and day of the week.

DAB Radio Settings

On DAB mode, open DAB radio settings by pressing and **holding** the Menu/Info button (**Ref.2**) for 2-3 seconds. The following setting options will then display:

Station List: Select this option to view the available stations to begin playing on the unit. Select a station to play by pressing down the navigation dial (**Ref.7**).

Full Scan: Select to begin a full scan for available digital radio stations. This would be advisable to receive more stations or resolve any signal issues.

Manual Tune: Select this option to scroll through available stations by their DAB channel and frequency (MHz). Select a station to play by pressing down the navigation dial (**Ref.7**).

Prune Invalid: Select this option to remove invalid stations or stations with poor signal. When "Proceed to prune the invalid stations?" shows, select "Yes" with the navigation dial (**Ref.7**) to prune.

DRC (Dynamic Range Compression): Select this option to reduce the volume of louder sounds and boost the volume of quieter sounds. Select High, Low or Off with the navigation dial (**Ref.7**)

System Settings: Press to open and edit system setting options such as Equaliser, Time/Date, Backlight, Language, Factory Reset and Software Version. These settings will be explained on pages 28 - 29 of the manual.

FM Radio

Press the Power/Mode button (do not hold the button) (**Ref.1**) or (**Rem.6**) to open the mode home screen. Select 'FM' on the main display screen by browsing with the Navigation dial (**Ref.7**) and selecting the mode by pressing down the dial or use the navigation buttons on the remote (**Rem.2/3/4/5/15**).

On first use of FM radio, initiate a manual scan up the bandwidth for available stations by pressing and **holding** the '>' button (**Ref.6**) for 2-3 seconds. The FM frequency will now increase quickly as it scans. Once the bandwidth has been scanned, the first stored and available station up the bandwidth will begin to play.

To scan quickly up the bandwidth between saved stations, press and **hold** the '>' button (**Ref.6**) for 2-3 seconds and then release. To scan quickly down the bandwidth between saved stations, press and **hold** the '<' button (**Ref.5**) for 2-3 seconds and then release.

To search slowly up the bandwidth, press the '>' button multiple times (do not hold) until on your desired frequency. To search slowly down the bandwidth, press the '<' button repeatedly (do not hold) until on your desired frequency.

FM Preset Stations

Pre-setting your favourite FM stations

Up to 10 FM stations can be preset for easy navigation. To create a preset, you must be listening to the chosen station.

Presetting from the unit

From the unit, you can easily set preset number 1-3 by pressing and **holding** one of the Preset 1-3 buttons (**Ref.10/11/12**). Please ensure that the button is held for 2-3 seconds rather than pressed. The screen will then display "Preset X Saved".

To set preset number 4+, press and **hold** the Preset 4+ button (**Ref.13**) to open the 'Save to Preset' screen. Please ensure that the button is held for 2-3 seconds rather than pressed. Use the navigation dial to scroll through the preset numbers and select the preset number by pressing down the dial (**Ref.7**).

Presetting from the remote

When you have found your desired station, press and **hold** the 'Preset' button on the remote (**Rem.21**) for 2-3 seconds to go to the 'Save to Preset' screen.

Use the '<' and '>' buttons on the remote (**Rem.3/15**) to scroll to the chosen preset number you wish to save the station to. Select the preset number by pressing the OK button (**Rem.4**)

Please note: To remove a preset option that has been made, simply preset another radio station over the preset number.

Recalling your preset FM stations

Recalling presets from the unit

From the unit, you can easily recall preset number 1-3 by pressing one of the Preset 1-3 buttons (**Ref.10/11/12**). Please ensure that the button is being pressed and released, rather than held. The screen will then begin playing the selected station.

To recall preset number 4+, press the Preset 4+ button (**Ref.13**) to open the 'Preset Recall' screen. Use the navigation dial to scroll through the preset numbers and select the preset station to play by pressing down the dial (**Ref.7**)

Recalling presets from the remote

To recall your preset stations via the remote control, press (do not hold) the Preset button (**Ref.21**) to go to the 'Preset Recall' screen.

Use the '<' and '>' buttons on the remote (**Rem.3/15**) to scroll to the chosen preset number you wish to play. Select the preset number by pressing the OK button (**Rem.4**) and the station will begin to play.

FM Station Information

Whilst playing a FM station, the following station information can be viewed by pressing the 'Menu/Info' button repeatedly (**Ref.2**) on the unit.

Dynamic Label Segment (DLS): Displays text information supplied by the broadcaster.

PTY (Programme Type): Shows the type of the programme provided by the station.

Frequency: Displays the station transmission frequency.

Audio Type: Displays the audio type of the station: stereo or mono.

Date and Day: Displays the date and day of the week.

FM Radio Settings

On FM mode, open FM radio settings by pressing and **holding** the Menu/Info button (**Ref.2**) for 2-3 seconds. The following setting options will then display:

Scan Setting: Choose between scanning only stations with strong signal, or scanning for all stations, including those with weak signals. Select your chosen option with the navigation dial (**Ref.7**).

Audio Setting: Select this option to choose between “Stereo Allowed” or “Forced Mono”. Select your chosen option with the navigation dial (**Ref.7**)

All stereo stations are reproduced in stereo - for weak stations this can result in poor audio quality. The audio quality can be improved by using mono.

System Settings: Press to open and edit system setting options such as Equaliser, Time/Date, Backlight, Language, Factory Reset and Software Version. These settings will be explained on pages 28 - 29 of the manual.

Bluetooth Mode

Press the Power/Mode button (**Ref.1**) (do not hold the button) or (**Rem.6**) to open the mode home screen. Select 'Bluetooth' on the main display screen by browsing with the Navigation dial (**Ref.7**) and selecting the mode by pressing down the dial or use the navigation buttons on the remote (**Rem.2/3/4/5/15**).

The radio screen will display "disconnected" before set up.

Go to your device's Bluetooth settings to connect your chosen device to the radio via Bluetooth. Please note that the radio only takes Bluetooth input from devices such as a phone or tablet.

The device will display as "Majority Willingham". Select the radio from your device and they will begin to connect.

Select your chosen audio on your device and play.

Once connected, control the playing audio from your device rather than with the radio's navigation buttons.

AUX-In Mode

Press the Power/Mode button (**Ref.1**) (do not hold the button) or (**Rem.6**) to open the mode home screen. Select 'AUX' on the main display screen by browsing with the navigation dial (**Ref.7**) and selecting the mode by pressing down the dial or use the navigation buttons on the remote (**Rem.2/3/4/5/15**).

Plug an AUX cable into the chosen device and connect the device to the radio via the AUX-in port (**Ref.18**) at the back of the radio.

Begin playing audio from your device and this will begin to sound out of the radio when in AUX mode.

Once connected, control the playing audio from your device rather than with the radio's navigation buttons.

CD Player

Press the Power/Mode button (**Ref.1**) (do not hold the button) or (**Rem.6**) to open the mode home screen. Select 'CD' on the main display screen by browsing with the navigation dial (**Ref.7**) and selecting the mode by pressing down the dial or use the navigation buttons on the remote (**Rem.2/3/4/5/15**).

The display screen for the CD function will now show "CD Open". Insert your CD slightly and the drive will take the CD into the system to play (**Ref.15**). If it does not automatically do so, select the Open/Close CD function on the radio (**Ref.9**).

The first song on the CD will now begin to play.

CD Functions

To skip between songs, press the '<<' or '>>' buttons on the radio (**Ref.12/13**) or on the remote (**Rem.10/20**). Pause/Play using the button on the radio (**Ref.10**) or on the remote (**Rem.19**).

To skip rewind/forward through a song playing, **hold down** the '<<' or '>>' buttons (**Ref.12/13**) on the unit or on the remote (**Rem.10/20**) for 2-3 seconds and release when you wish to stop skipping.

To eject the CD, press the Open/Close CD function on the radio (**Ref.9**) or on the remote (**Rem.13**)

To stop the album, press and **hold down** the navigation dial on the unit (**Ref.7**) for 3 seconds and release. This will also display how many songs are on the album and total playing time. Press 'Play/Pause' to begin listening again (**Ref.10**) (**Rem.19**).

Arrange a CD song program

This setting allows you to program the CD player to play songs in a particular order.

1. A CD must be inserted into the CD player of the machine. To open program settings, press and **hold down** the Navigation dial for 3 seconds (**Ref.7**) or press and **hold** the OK button on the remote (**Rem.4**) for 3 seconds to stop the CD. The full time of the CD running time and number of tracks will display.
2. Follow by pressing and **holding** the 'Repeat/Program' button on the radio (**Ref.11**) for 3 seconds to open program settings.
3. Once in program settings, the display will show P01 T01, with the the first song on the CD representing T01, and P01 being program number 1. You can now choose what song you would like as program number P01 by using the '<<' and '>>' buttons (**Rem.10/20**) to scroll through to the song number you would like to choose (T--). Once on the chosen track number (T--) for P01, press down the navigation dial/OK button (**Ref.7**) (**Rem.4**) to select and be taken to choose your next programmed song.
4. For the next song, the display will show P02 T-- to show the program 2. Now use the '<<' and '>>' buttons (**Rem.10/20**) to scroll through to the selected track number. Once on the chosen track for program 2, press down the navigation dial/OK button to select and continue programming as per step 3 and 4.
5. After you have finished program song selection, press the 'Play/Pause' button on the radio (**Ref.10**) to begin playing the songs which have been programmed.

Press the "Stop" button to exit the "Program" when programming.

USB Playback

Press the Power/Mode button (**Ref.1**) (do not hold the button) or (**Rem.6**) to open the mode home screen. Select 'USB' on the main display screen by browsing with the navigation dial (**Ref.7**) and selecting the mode by pressing down the dial or use the navigation buttons on the remote (**Rem.2/3/4/5/15**).

Plug in a USB stick (**Ref.19**), with files uploaded onto the stick, into the USB port. Ensure that the file types on the device are MP3 and WMA.

Highlight the desired folder/song with the Navigation dial (**Ref.7**) and select for your chosen song to play.

Please note that the USB port is for USB playback only. Audio cannot be played by connecting a USB cable to a chosen audio product.

Dual Alarm Setting

Setting Alarm 1/Alarm 2

To set an alarm on your radio, select the 'Alarm' button (**Ref.3**) on the unit or on the remote control (**Rem.9**)

After selecting the alarm setting, select Alarm 1 or Alarm 2 with the navigation dial (**Ref.7**) or navigation buttons on the remote (**Rem.2/3/4/5/15**) to begin setting the following alarm functions:

Alarm: Press the navigation dial down to switch between turning the alarm on and off.

Frequency: Select option to choose the regularity of the alarm between Daily, Once, Weekends and Weekdays. Select the chosen frequency by selecting with the navigation dial.

Wake Up Time: The hour digits of the alarm will now begin to flash. Change the alarm hour with the navigation dial or Previous and Next buttons (**Ref.5/6**). Once on the chosen alarm hour, press down the navigation dial to confirm. Follow the same process for setting the alarm minutes.

Source: Select between the following alarm wake-up tones: Buzzer, Digital Radio and FM. If Digital Radio or FM are selected, a new alarm setting option will display and allow you to choose one of your preset stations, or the last station played on the mode as your alarm tone.

Duration: Select the duration of the alarm tone between the following options: 15, 30, 45, 60, 90 or 120 minutes.

Volume: Use the navigation dial to select the alarm volume.

Setting: Alarm Features

How to cancel your alarm

Cancel the alarm before it sounds by pressing the Alarm button (**Ref.3**) in standby mode or working mode.

Select the alarm that you would like to cancel: Alarm 1 or Alarm 2 with the navigation dial (**Ref.7**). Navigate to the option stating 'Alarm' and press down the navigation dial to switch between "OFF" and "ON". Ensure that the setting states "OFF" to successfully cancel the alarm.

How to turn off your alarm when sounding

Turn off the alarm by pressing the Power/Mode button (**Ref.1**) when it is sounding.

The screen will then display "Alarm Off".

How to put your alarm on snooze

To put the alarm on snooze for 9 minutes, press down the navigation dial (**Ref.7**), Sleep button (**Ref.4**) or Alarm button (**Ref.3**). The snooze timer will then display at the bottom of the screen.

If you would like to stop the snooze function, press down the navigation dial, Sleep button, Alarm button or Power/Mode button. The screen will then display "Alarm Off".

Sleep Timer Settings

A sleep timer can be set to switch your radio to standby after the selected period of time.

To set a sleep timer, select the 'Sleep' button on the unit (**Ref.4**) or on the remote (**Rem.8**) to open the "Set Sleep Timer" screen.

Press the Sleep button repeatedly to switch between sleep times available. There is an option between Off, 15, 30, 45, 60, 90, minutes.

Select the sleep timer length by either selecting with the navigation dial OK button (**Ref.7**), or leave the screen on your selected option for 10 seconds to save automatically.

Once the sleep timer has been selected, the timer amount and a sleep image will show on the bottom left of the radio screen.

To turn Sleep off, simply keep selecting the 'Sleep' button until "Sleep Timer Off" displays and select this option.

System Menu Settings

Access the menu settings by pressing and holding the Info/Menu button for 2-3 seconds on any of the modes. Scroll with the navigation dial (**Ref.7**) to the "System Settings" option and select with the dial. The following setting options will display:

Time/Date

Once this is selected, the following options will display for setting:

Set Time/Date: The day date will now begin to flash. Change the day with the navigation dial or Previous and Next buttons (**Ref.5/6**). Once on the chosen digit, press down the navigation dial to confirm. Follow the same process for setting the month and year.

The time can now be set and the hour digits of the time will begin to flash. Change the hour with the navigation dial or Previous and Next buttons (**Ref.5/6**). Once on the chosen time hour is displaying, press down the navigation dial to confirm. Follow the same process for setting the time minutes.

Auto Update: An automatic set of the clock and date for particular modes can be selected. Choose between: From Any, from Digital Radio, from FM, or No Update.

Set 12/24 Hour: Decide between a 12 and 24 hour clock display.

Set Date Format: Decide between two date formats for the display: DD-MM-YYYY or MM-DD-YYYY.

Equaliser

Choose between a variety of equaliser settings that improve the sound quality of the audio type/genre: Normal, Classic, Jazz, Pop, Rock, Speech or My EQ. My EQ allows you to manually adjust the bass and treble and tailor to your desired sound. Select the chosen option with the navigation dial OK button (**Ref.7**)

Backlight

Timeout: Select the option to choose the backlight display timeout. The screen will darken after the period of time selected. The timeout options are the following: On, 10, 20, 30, 45, 60, 90, 120 and 180.

On Level: Select this option to choose the on level screen brightness. The brightness options are High, Medium or Low.

Dim Level: Select this option to choose the dim level screen brightness. The brightness options are High, Medium or Low.

Language

Select your chosen default language for the radio from the list with the navigation dial OK button (**Ref.7**).

Factory Reset

Select this option to perform a factory reset. This would be advisable if your radio has any functionality issues. Once asked to confirm reset, select "Yes" with the navigation dial.

Software Version

Select this option to view the software version of the radio.

Additional Features

Headphone Jack

You can listen to any mode on the radio via your favourite earphones, rather than the external speakers. Insert the earphone port into the headphone jack at the back of the radio (**Ref.17**).

Troubleshooting

Malfunction	Possible causes/measures
Functionality issues	For any functionality issues, it is advisable to go to the menu radio settings and perform a factory reset which will restart your radio.
No power / function	Check whether the power is switched on or off at the wall. Check whether the power adaptor is properly connected to power outlet or not.
No sound	Check whether unit is set to MUTE. Check whether MODE is correctly selected. If you are connected via Bluetooth or AUX, turn up the volume on your device. Check whether cables are properly installed or not.
Functional disturbance	Switch off and unplug the unit. Leave it for 2 minutes and switch it on again. Perform a factory reset and rescan for stations.
Bluetooth not connecting	Ensure that you are on Bluetooth mode on the radio and the Bluetooth on your device is switched on. Select the Bluetooth device 'Majority Willingham' and you should now be able to play audio.
CD player not working	Go to CD mode. Gently insert a CD and the CD player should automatically take the CD within the drive. The CD should then begin to play - do not click any remote buttons as this may interrupt it. If problems persist, factory reset the unit and try this mode again.

Specifications

Specifications

Power Supply	DC 12V 2A (output)
Mode:	FM: 87.5MHz - 108 MHz DAB: 174 - 240 MHz CD Bluetooth 3.5mm AUX-in USB: MP3, WMA
Dimensions	40 x 24 x 13cm
Weight	3.8kg

Warranty

All products come with a standard 12 month warranty. All items must be registered on www.majorityradios.co.uk for the warranty to be valid. Once on the web page, use the menu to find "Register Your Product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

1. **Read these instructions.**
2. Keep these instructions. Instructions are also available for download at www.majorityradios.co.uk
3. Heed all Warnings
4. Follow all instructions
5. Do not clean the apparatus near or with water
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during light storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel.
Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus.
13. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus. Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.
Do not open



Read all instructions carefully before use and keep for future reference



When servicing, use only identical replacement parts



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference

MAJORITY

www.majorityradios.co.uk