

MAJORITY

NEPTUNE

Docking Station & Radio Alarm

NEP-FM-WHT



Instructions Guide

Contents

Box Contents	1
Controls And Functions	2
Support	5
Instructions Guide	6
Basic Operation	6
iPhone/iPod Connection.....	7
USB Functions.....	8
AUX-In Playing Mode	10
FM Radio Mode	11
Alarm Functions.....	13
Setting the Clock.....	14
Sleep Setting	15
Brightness Setting	16
Specifications	17
Warranty	17
Safety Information	18

**3 YEAR
WARRANTY**

Watch video tutorials and register
your product for a FREE 3-year warranty
at www.majorityradios.co.uk

What's in the Box?


1. Majority Neptune Docking Station
2. Remote Control
3. AUX-In Jack Cable
4. UK Standard Plug Power Supply
5. User Guide



Controls And Functions


Top View

1. Stand
2. Dock
3. Volume (-)
4. Power Button
5. Sleep
6. Alarm 1
7. Alarm 2
8. Volume (+)
9. Snooze/Dimmer
10. Skip Back
11. Set Mode
12. Play/Pause/Scan/Call
13. Skip Forward

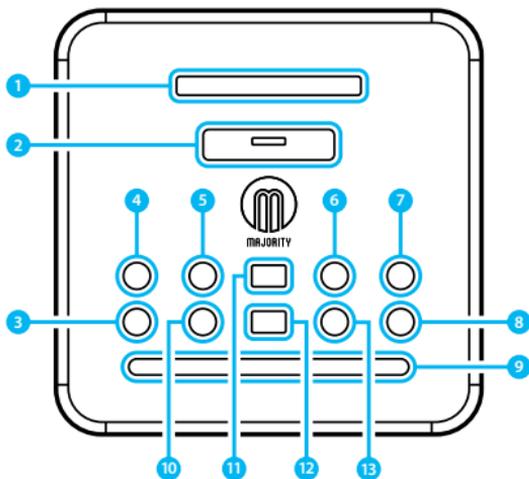


Back View

14. USB Out 1 Jack
15. Aux-In-Jack
16. Time
17. Volume (-)
18. Volume (+)
19. Antenna
20. DC 5V In

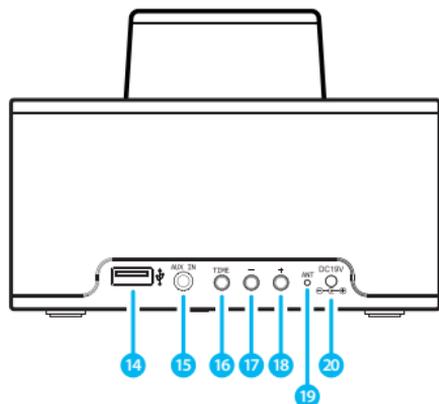


Display Screen

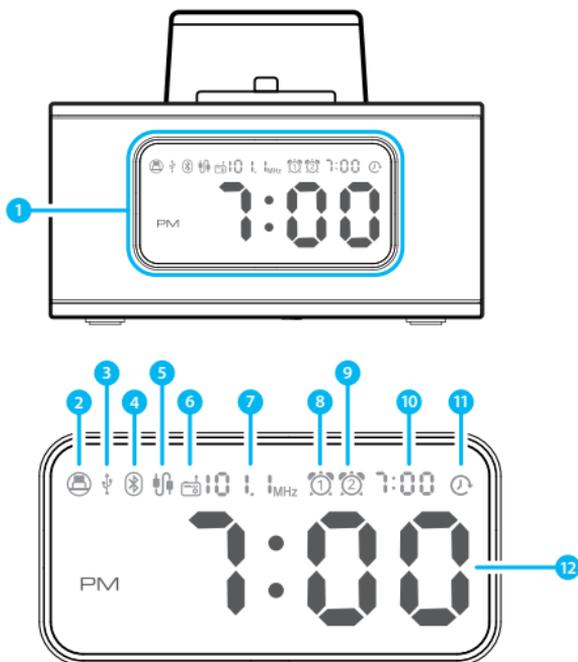

1. Display Screen
2. iPhone/iPod Docking Mode
3. USB Mode
4. Bluetooth Mode
5. Aux-In Mode
6. FM Radio Mode
7. Radio Station
8. Alarm 1 On
9. Alarm 2 On
10. Alarm Time
11. Sleep Timer
12. Time Display

Remote Control

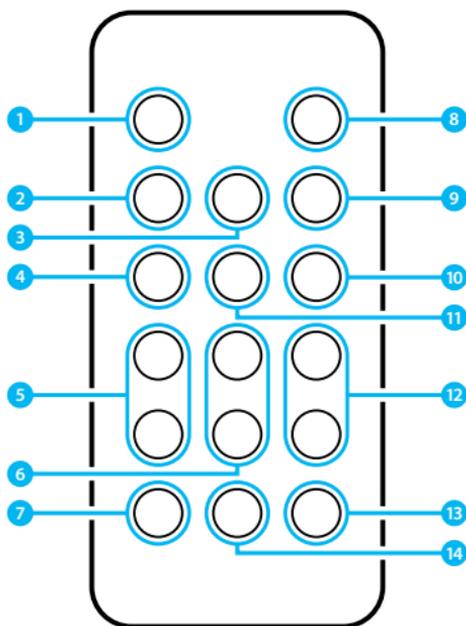

- | | |
|--|-------------------------|
| 1. Power On/Off | 8. Mode Selection/Alarm |
| 2. Time Setting | Ring Source Selection |
| 3. Sleep Time Setting | 9. Dimmer |
| 4. Skip Back | 10. Skip Forward |
| 5. Alarm 1 & 2 | 11. Play/Pause |
| 6. Tune Up & Down (hold
and press to auto-scan) | 12. Volume Up & Down |
| 7. Snooze | 13. Mute |
| | 14. Auto-Scan |

Support

Thank you for your purchase of the Majority Neptune.

Please follow the guidance of the manual to set up your docking station and enjoy its fantastic variety of stations and features.

If you require further assistance with your new purchase, please contact our support team on the Majority website:

<https://www.majorityradios.co.uk/support/>

Basic Operation

Please note all (Ref.) refer to Page 2-3 Controls and Functions mapping guide.

Starting up your radio

Plug the adaptor connector into the back of the system labelled 'DC 5v' and turn the power on from the mains (**Ref.20**).

Press the 'Power' button to turn on the unit (**Ref.9**) and "ON" will be displayed on the screen.

To select a mode, press the 'Set Mode' button (**Ref.11**) multiple times until your required option displayed on the screen (pg.2).

There are five modes to select from:

- **iPod/iPhone Connection**
- **USB Playing Mode**
- **Bluetooth**
- **AUX-In Playing Mode**
- **FM Radio**

Standby

To place the music system back to standby, press the 'Power' button (**Ref.9**). The front display will show "Off" and then switch to the standby screen with a clock display.

To turn the unit off fully, switch it off at the mains.

Please ensure that the cord is out of reach of children.

iPhone/iPod Connection

iPhone/iPod Docking

Press the 'Set Mode' button (**Ref.11**) repeatedly until "iPod" displays on the front display screen (**Ref.1**) to indicate iPhone/iPod mode.

Insert your iPhone/iPod onto the dock (**Ref.3**) and ensure that it is supported by the stand. You may have to remove your phone case to ensure that it is connecting properly to the port.

Once your iPhone/iPod is connected to the dock, your device will begin to charge.

Go to your iPhone/iPod and begin to play your favourite albums, playlists or music app - this should now begin to be heard out of the Neptune speakers.

Once the music is playing from your device, you can use the 'Skip Back' (**Ref.5**) or 'Skip Forward' (**Ref.7**) buttons to select previous or next tracks. The remote control can also be used for various functions, see page 3.

Please ensure that your iPhone/iPod is not on low volume.

USB Functions

USB Playing Mode

Select the 'Set Mode' button (**Ref.11**) repeatedly to scroll to USB mode. When the  icon appears, USB mode will be selected for USB playing mode.

Connect a USB stick into the USB port at the back of the docking station. Audio from the USB stick should begin playing automatically when in USB mode.

Use the '<<' and '>>' buttons (**Ref. 5/7**) to select previous or next tracks. You can also use the 'Play/Pause' button (**Ref.6**) to play or pause a track.

USB Charging

Connect a USB charging cable into the USB charging port at the back of the unit (Ref.).

Connect the USB cable to your device to begin charging your device.

Please note that you cannot play music from your phone, tablet or other device by connecting it via USB cable.

Bluetooth

Connect to Bluetooth

Select the 'Set Mode' button (**Ref.11**) repeatedly to scroll to Bluetooth mode. When the  icon appears, Bluetooth mode will be selected.

Go to Bluetooth settings on your phone/tablet and ensure that it is switched on. "Majority Neptune" should then display in available devices to connect to. Select this option to connect to it and your device should display "Connected".

To choose the music you wish to play, you will need to choose the album, playlist or streaming service from your device.

Use the '<<' and '>>' buttons (**Ref. 5/7**) to select previous or next tracks. You can also use the 'Play/Pause' button (**Ref.6**) to play or pause a track.

Tip: Ensure the volume is switched up on your device to ensure you have sound. Ensure any other users have disconnected from the device before trying to connect.

Bluetooth Call Connection

Once your phone is connected via Bluetooth to the Neptune and you have approved access to your phone book, you can accept and cancel calls from the dock.

To answer a call, press the 'Play/Pause/Scan/Call' button (**Ref.6**). Press this button again to end the call.

To resume music after the call has ended, press the 'Play/Pause/Scan/Call' button (**Ref.6**) again.

AUX-In Playing Mode

Scroll through to AUX mode by pressing the 'Set Mode' button (**Ref.11**) repeatedly until the  icon displays on the screen.

You can connect your phone or tablet with an Aux 3.5mm cable that connects to the Aux-in jack (**Ref.15**).

Begin playing music from your device and it will begin to sound through the Neptune speakers.

Please ensure that the volume on your device is switched up so that it sounds through the Neptune.

FM Radio Mode

Scroll through to FM Radio mode by pressing the 'Set Mode' button (**Ref.11**) repeatedly until the  icon displays on the screen.

Move the antenna so that you get the best signal you can (**Ref.19**).

Press and hold the 'Scan' button (**Ref.6**) and the music system will automatically save all stations that have a good signal.

To scroll through the saved stations, use the 'Skip Bk' (**Ref.5**) or 'Skip Fwd' (**Ref.7**) buttons.

To fine tune, use the 'Tun+' (**Ref.11**) and 'Tun-' (**Ref.12**) buttons to tune a frequency, hold the button to scan quickly.

Settings: Dual Alarm Function

Setting your alarm

Please note that the 'Alarm 1' option is a Sound Once alarm, and 'Alarm 2' is an Everyday alarm.

Press the 'Alarm 1' button (**Ref.12**) or the 'Alarm 2' button on the radio (**Ref.13**). The alarm icon 1 or 2 will appear on the display screen.

When setting the alarms using the remote control, press the 'Set' button (**Ref.3**) and use the 'Skip Back' (**Ref.6**) or 'Skip Fwd' (**Ref.7**) buttons to choose your hour and minutes. Press the 'Set' button (**Ref.3**) when confirming your options.

Firstly, you will need to select your alarm sound. There are 4 sound options to select from. Press the 'Alarm1/2' button multiple times to choose between the following options: iPod, Radio, Buzzer or Off. Press the 'Set Mode' button (**Ref.11**) to select your option.

Next, you can set the hour of the alarm by using the '-' (**Ref.4**) and '+' (**Ref.8**) buttons. Once your alarm hour displays, press the 'Set Mode' button (**Ref.11**) to confirm.

Next, you can set the minutes of the alarm by using the '-' (**Ref.4**) and '+' (**Ref.8**) buttons. Once your alarm minutes display, press the 'Set Mode' button (**Ref.11**) to confirm.

When the alarm is set, an icon will display on the main display screen.

Alarm Functions

The alarm will sound from low to high volume.

To snooze your alarm for another 9 minutes, press the 'Snooze/Dimmer' button (**Ref.2**). You can keep snoozing for up to 30 minutes.

To turn alarm off, press the 'Power' button (**Ref.9**) or 'Alarm 1/2' button (**Ref.12/13**). Alarm 1 will need to be reset on every use but Alarm 2 will sound daily once set unless the setting is changed to 'Off'.

Setting the Clock

The time will automatically set once you have docked your iPhone into the unit and will show when system is in Standby. To manually set, follow the below instructions:

Manually Setting the Time

Press and **hold** the 'Time' button (**Ref.16**) for 1 second to display clock options. Select your option using the '-' (**Ref.4**) and '+' buttons (**Ref.8**).

Firstly, you will need to select a 12 or 24 hour clock for the display screen. Using the '-' (**Ref.4**) and '+' (**Ref.8**) buttons, select 12 HOUR or 24 HOUR. When your option displays, press the 'Time' button to confirm your option.

Next you can set the clock hour. The clock hour will flash and you can change it using the '-' (**Ref.4**) and '+' (**Ref.8**) buttons. When the correct hour displays, press the 'Time' button to confirm your option.

Next you can set the clock minutes. The clock minutes will flash and you can change it using the '-' (**Ref.4**) and '+' (**Ref.8**) buttons. When the correct minutes display, press the 'Time' button to confirm your option.

Sleep Setting

Sleep Setting enables you to programme the music system to switch off at a set time – up to 90 minutes.

Press the 'Sleep' button (**Ref.10**).

Browse through the sleep timer options by pressing the 'Sleep' button (**Ref.10**) multiple times. The options are '90/80/70/60/50/40/30/20/10 or Off'.

The sleep icon will appear in the top right of the display screen. To see how many minutes you have left before the unit automatically switches off press the 'Sleep' button (**Ref.10**).

To turn the function off, follow the above instructions and choose "OFF".

Brightness Setting

To change the display screen brightness, use the remote control 'Dimmer' button (**Ref.5**) or the 'Dimmer' button (**Ref.2**) on the unit.

Press the button repeatedly to choose between 4 different brightness levels. You can also choose to turn the brightness off completely.

Specifications

Power Supply	DC 5V 3A (100-240V 50/60 Hz)
Modes	FM (87.5MHz - 108MHz) Bluetooth USB AUX In Dock Play
Dimension (WxHxD)	13.8 x 13.8 x 6.9 cm
Net Weight	750 g

Warranty

All products come with a standard 12 month warranty. All items must be registered on www.majorityradios.co.uk for the warranty to be valid. Once on the web page, use the menu to find "Register Your Product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

Safety Information

1. **Read these instructions.**
2. Keep these instructions. Instructions are also available for download at www.majorityradios.co.uk
3. Heed all Warnings
4. Follow all instructions
5. Do not clean the apparatus near or with water
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during light storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel.
Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus.
13. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus.
Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.
Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.
Do not open



Read all instructions carefully before use and keep for future reference



When servicing, use only identical replacement parts



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference

MAJORITY

www.majorityradios.co.uk