

MAJORITY

R O B I N S O N

INTERNET RADIO ADAPTER

ROB-ADT-BLK



Instructions Guide

Contents

What's in the Box?	1
Controls and Functions	2
Support	6
Instructions Guide	7
Basic Operation	7
Internet Radio.....	10
Media Centre.....	12
FM Radio.....	14
DAB/DAB+ Radio	16
Spotify Connect (Only in applicable models).....	18
Information Centre	19
Bluetooth.....	20
Connections	21
Configuration Settings	22
Settings: Additional Features	27
Remote Control App	29
Troubleshooting	31
Specifications	32
Warranty	32
Safety Information	33

**3 YEAR
WARRANTY**


Watch video tutorials and register
your product for a FREE 3-year warranty
at www.majorityonline.co.uk

Box Contents


1. Majority Robinson Adapter
2. Remote Control
3. Telescopic Antenna
4. RCA Audio Cable
5. Power Adapter
6. Instructions Guide



Front View

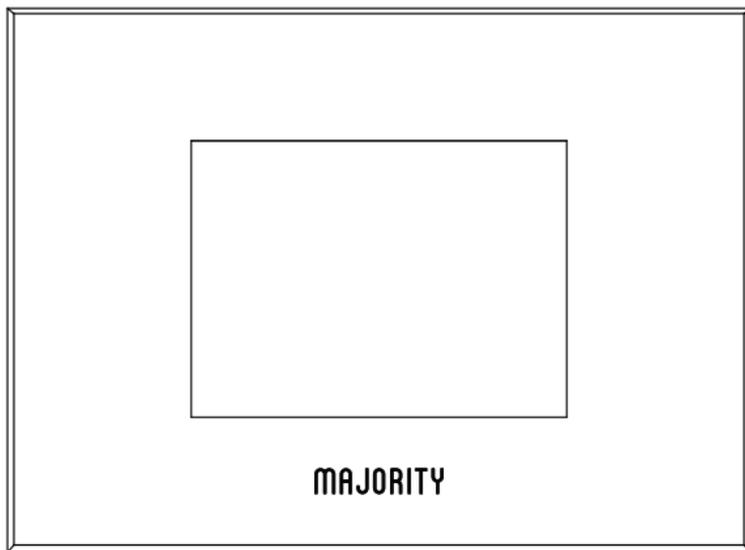


Back View

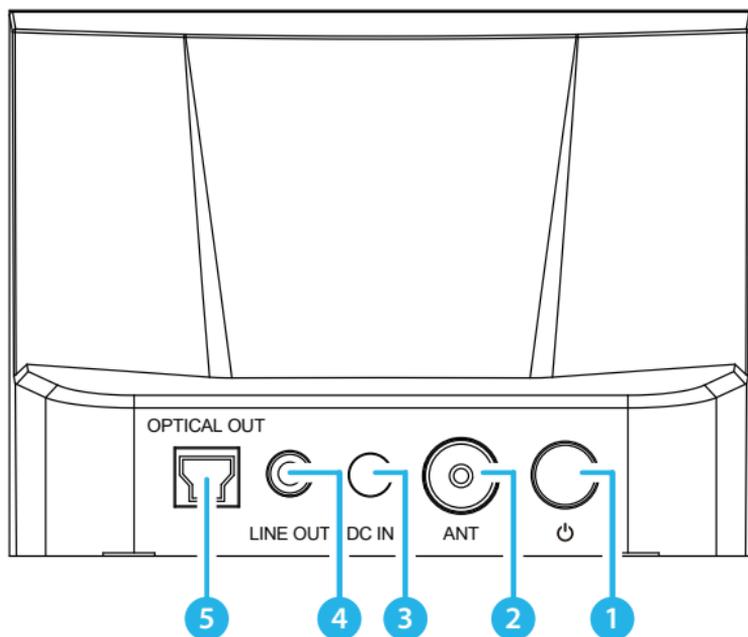

1. Power button
2. Antenna port
3. DC IN power port
4. Line Out port
5. Optical Out port

Controls and Functions

Remote Control

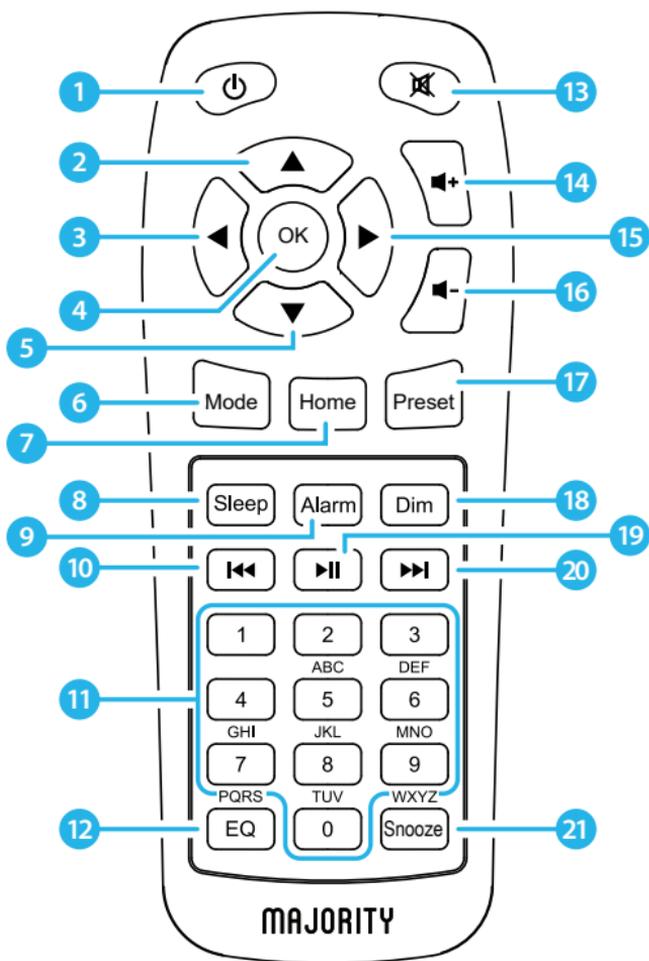

- 1. Power On/Standby**
Switch the unit between on and Standby mode
- 2. Up button**
Navigate up
- 3. Left button**
Navigate left
- 4. OK button**
Select options and settings with the OK button
- 5. Down button**
Navigate down
- 6. Mode button**
Press repeatedly to switch between modes.
- 7. Home button**
Select to open the Home screen.
- 8. Sleep button**
Press to begin setting a sleep timer.
- 9. Alarm button**
Enter alarm settings
- 10. Previous button**
Go to a previous track in BT mode
- 11. 0-9/A-Z Keypad**
Type numbers and letters
- 12. EQ (Equaliser) button**
Select to choose equaliser settings
- 13. Mute button**
Select to mute and unmute sound track in CD mode.
- 14. Vol +**
Increase volume
- 15. Right button**
Navigate right/Go forward
- 16. Vol -**
Decrease volume
- 17. Preset button**
Press and **hold** button for 2-3 seconds to set a preset. Press (do not hold) to recall preset stations.
- 18. Dimmer button**
Press dimmer repeatedly to go through options.
- 19. Play/Pause**
Play/Pause media in particular modes
- 20. Forward button**
Go to the next track in BT mode
- 21. Snooze button**
Press button to Snooze your alarm when sounding.

Support

Thank you for your purchase of the Majority Robinson radio adapter.

Please follow the guidance of the manual to set up your new purchase and begin enjoying its features.

If you require further assistance with your new radio, please contact our support team on the Majority website:

<https://www.majorityonline.co.uk/support>

Basic Operation

Please note that the instructions within this manual will refer to the radio button number e.g (Ref.*X*) in accordance to the diagrams on pages 2-3 or the remote (Rem. *X*) on pages 4-5.

Starting up your internet radio

Plug the adaptor connector into the back of the system labelled 'DC in' (**Ref.3**) and turn the power on from the mains. Press the Power button (**Ref.1**) at the back of the adaptor to switch on and to display 'MAJORITY' on the screen.

After the welcome screen, you will be able to select your chosen language with the remote control. To confirm the choice, press the 'OK' button on the remote (**Rem.4**)

If this is the first time of using your radio adapter, you will get the option to set up your WiFi to stream Internet Radio with the message "Enable 'Check Network when Power On?'". At this point, select YES with the remote's OK button to go to the next stage.


The screen will then display "Would you like to configure network now?". If you select YES, your adapter will begin to scan for nearby networks to connect to.

If you select NO then you can set this up later in configuration settings.

Please follow the next pages in the manual for help with setting up.

Manual WiFi Set-up


If you select YES, you will be able to select your chosen WiFi network and enter the WiFi password in the next display screen. Type letters/numbers by scrolling with the remote until the correct digit is displayed and click '>' to go to the next digit (**Rem.15**). Once finished, press down the 'OK' button to confirm.

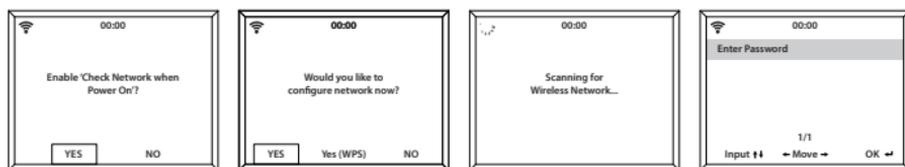

Wireless Network (WPS PBC)

When at the “Would you like to configure network now?” stage, if you select “YES (WPS)” your adapter will begin to search for WiFi connections.

Whilst this has been selected you will have 120 seconds to click the WPS button on your WiFi modem. This will connect your WiFi to your adapter without manually writing in the passcode.

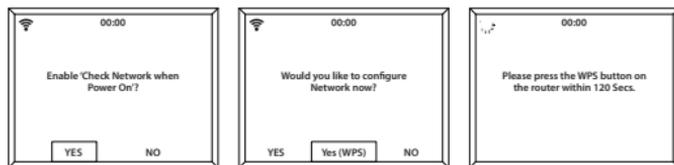

WiFi Connection Complete!

Once your WiFi is connected by manually entering your WiFi password or via WPS, you will be taken to the main menu screen and the WiFi signal will appear in white at the top left. Your internet radio adapter is now set up!

Internet Radio

Go to the main menu screen by selecting 'Home' (**Rem.7**) and select 'Internet Radio' on the display screen using the '<' and '>' buttons on the remote (**Rem.3/15**) and select with the 'OK' button (**Rem.4**).

When on the 'Internet Radio' screen, there will be multiple options to scroll through:

My Favourite: Your favourite stations will be saved here for easy listening.

Radio Station/Music: Select this option to browse internet radio stations in the categories of: Global Top 20, Genre, Country/Location, Highlight. Find stations under relevant categories and select your chosen internet station by selecting with the OK button.

Local Radio: The radio is automatically set up to detect your country's top DAB stations, Top 10 stations, All Stations, plus a variety of genres into categories in alphabetical order. Select the category that you wish to listen to with the OK button on the remote (**Rem.4**) and continue browsing until you find your desired station.

Sleep Radio: Choose from multiple relaxation sounds.

History: Browse through recently listened to stations

Service: Search for an internet radio station or add a new station. To search a new station, select 'Search Radio Station' to go to the search tool. Type letters/numbers by scrolling with the remote until the correct digit is displayed and click '>' to go to the next digit (**Rem.15**).

To go back to the previous character, press '<' to highlight it. Press down the OK button (**Rem.4**) when you have finished, to then begin the search for the internet station.

Pre-setting your favourite internet stations

When you have found your desired station to save as a preset, press and **hold** the 'Preset' button on the remote (**Rem.17**) for **2-3 seconds** to open the 'Add to my Favourites' screen.

Use the navigation buttons on the remote to go to the preset number you wish to save to and select the preset number by pressing the OK button (**Rem.4**).

Please note: If a station has already been preset, the radio will not allow you to preset twice.

Recalling your favourite internet stations

To view your preset favourite stations, press the Preset button on the remote (**Rem.17**) to scroll through your favourites. Do not hold down the button as this will open Preset Store settings. Once on the station you wish to play, press the OK button (**Rem.4**).

In internet radio mode, you can also simply type in the preset number with the numbers on the remote control for quick selection (**Rem.11**). The station will then begin to play.

Media Centre

Go to the main menu screen by selecting 'Home' (**Rem.7**) and select 'Media Centre' on the display screen using the '<' and '>' buttons on the remote (**Rem.3/15**) and select with the 'OK' button (**Rem.4**).

UPnP:

Universal Plug and Play allows you to connect to other devices to play your music such as personal computers (Windows media player), mobile (GooglePlay) and other devices.

Once you have selected UPnP, select the radio from your device to connect and from your phone you may need to select the adapter.

Both your device and the Robinson adapter will need to be connected to the same WiFi network.

Select the device with the OK button (**Rem.4**) that you want to play music or media from in UPnP settings.

If you have set up folders on your device that is being shared you can use the navigation buttons on the remote to scroll through your choices and confirm your selection by pressing down the OK button (**Rem.4**).

My Playlist:

You can create a playlist of favourite music or media from UPnP. When you are playing the media, press the 'OK' button on the remote control (**Rem.4**) to save it into My Playlist.

Access 'My Playlist' from the Media Centre.

Clear My Playlist:

If you have created a playlist via UPnP connection, you can select this option to clear the playlist. Select the option 'Clear my Playlist' with the OK button.

The adapter will then display "Confirm delete?". Select YES to delete your playlist with the OK button.

My Media U

In configuration settings there is the option to connect a MediaU account via the website **<http://www.mediayou.net/>**

Ensure that WiFi is connected to the adapter, and then obtain the wireless MAC address of the radio via Information Centre > System Information > Wireless Information. Enter this address on the MediaU website to allow the radio to sync your account.

When this is successfully configured you are then able to save and view your own MediaU station playlists.

FM Radio

Select 'FM mode' on the main display screen with the Home button (**Rem.7**). Once selected, the FM mode will start on 87.50MHz.

Please ensure that the antenna is connected into the back of the adapter (**Ref.2**) and the antenna extended.

Press down the OK button on the remote (**Rem.4**) and the screen will display "Auto Scan?". Select YES to begin an autoscans and receive the stations with the best signal. Once FM radio has scanned, you can select the numbers on the remote directly (**Rem.11**) for a station to begin playing.

To allow your radio to scan for the next station with strong signal, press and **hold** the '>' button (**Rem.15**). To scan down the bandwidth, press and **hold** the '<' button (**Rem.3**).

To manually scroll through FM stations, simply press the '<' and '>' buttons (**Rem.3/15**) repeatedly to scroll slowly.

Pre-setting your favourite FM stations

Once the auto-scan is complete, stations will be saved in your favourites.

To save a favourite station manually on FM, press and **hold** the Preset button on the remote (**Rem.17**) for 2-3 seconds to open the 'Add to my Favourites' screen.

The number '01' will display on the screen. Use the navigation buttons to browse through preset numbers and select the chosen preset number to save to with the OK button (**Rem.4**).

Recalling your favourite FM stations

View your favourite FM stations when you are on FM mode by selecting the Preset button (**Rem.17**). Do not hold down the button as this will open Preset Store settings.

Use the navigation buttons on the remote to scroll through the presets available and select the station to play by pressing the OK button (**Rem.4**).

Once FM radio has scanned, you can also select the numbers on the remote directly (**Rem.11**) for a station to begin playing.

DAB/DAB+ Radio

Select 'DAB/DAB+' on the main display screen by browsing with the navigation buttons on the remote and select by pressing down the 'OK' button (**Rem.4**).

Please ensure that the antenna is connected into the back of the radio (**Ref.2**) and the antenna extended.

On first use of DAB, it will begin scanning for DAB stations and will show 'Scanning' on the display screen. It will display how many stations have been found as the search continues.

Once all of the available stations have been found, the screen will display the choice of available stations. Scroll through using the navigation buttons and highlight the chosen station. Select the station by pressing down the OK button (**Rem.4**).

When you have selected a station, the screen will display the station and begin to play. To choose the previous or next station, go back to the list by pressing the '<' button (**Rem.3**) and use the navigation buttons to scroll through the station list.

When on your chosen station, select the '>' button (**Rem.15**) to show information on the station. The screen will automatically scroll through information and display genre, MHz, song playing, KHz and Kbps.

To rescan your stations, go on the main list page for the DAB stations and select the '<' button to start a scan (**Rem.3**). This would be advisable if you are having signal issues.

Pre-setting your favourite DAB/DAB+ stations

When you have found your desired station to save as a preset, press and **hold** the 'Preset' button on the remote (**Rem.17**) for **2-3 seconds** to open the 'Add to my Favourites' screen.

Use the navigation buttons on the remote to go to the preset number you wish to save to and select the preset number by pressing the OK button (**Rem.4**).

Please note: If a station has already been preset, the radio will not allow you to preset twice.

Recalling your favourite internet stations

To view your preset favourite stations, press the Preset button on the remote (**Rem.17**) to scroll through your favourites. Do not hold down the button as this will open Preset Store settings. Once on the station you wish to play, press the OK button (**Rem.4**).

In DAB mode, you can also simply type in the preset number with the numbers on the remote control for quick selection (**Rem.11**). The station will then begin to play.

Spotify Connect (Only in applicable models)

Please note that this is only applicable in particular models.

Listen out loud with Spotify Connect

- 1.** Connect your Majority Robinson to your WiFi network.
- 2.** Open up the Spotify app on your phone, tablet or laptop using the same WiFi network.
- 3.** Play a song and select Devices Available.
- 4.** Select your Majority Robinson and start listening.

The Spotify Software is subject to third party licenses found here:
www.spotify.com/connect/third-party-licenses.

Information Centre

Select 'Information Centre' on the main display screen by using the remote navigation buttons and the OK button (**Rem.4**).

Weather Information: To select the weather information for a desired place, first select the continent by using the navigation buttons and OK button. Following this, then select the country, followed by the town/city.

Once you choose a chosen town/city, the following information will be displayed: current temperature, weather symbol image, approximate temperature range for the next 5 days.

Financial Information: Select from a range of stock market index's from around the world. Scroll and select using the navigation buttons and OK button.

System Information: View system version and wireless connection information. If wireless information is selected, information such as WiFi's signal strength can be found. The MAC address for the unit can also be located here for MediaU services.

Bluetooth

Select 'Bluetooth' on the main display screen by using the navigation buttons and selecting the 'OK' button (**Rem.4**).

Go to your device settings to connect your device to the adapter via Bluetooth.

The device will display as 'Majority Robinson' in your device's Bluetooth settings. Select this from your phone to connect and the adapter will show as "Connected".

Select your chosen audio on your device and play. Control the playing audio from your device, rather than with the remote control of the unit.

Connections

Line Out Port

At the back of the adapter, the 'Line Out' (**Ref.4**) port allows for an external amplifier/stereo speaker to be connected.

Simply connect the supplied RCA audio cable or an AUX cable (not supplied) from the 'Line Out' port to the amplifier/stereo.

Begin playing audio from the Internet radio, DAB/DAB+ and FM radio, Media Centre, Spotify, or Bluetooth setting.

Optical Out Port

At the back of the adapter, the 'Optical Out' (**Ref.5**) port allows for an external unit or speaker to be connected.

Simply connect an optical cable from the 'Optical Out' port to the external unit or speaker.

Begin playing audio from the Internet radio, DAB/DAB+ and FM radio, Media Centre, Spotify, or Bluetooth setting.

Configuration Settings

Select 'Configuration' on the main display screen to browse through a range of display, performance and audio settings.

Network: Select this for WiFi and network options

Wireless Network Configuration

On the Network settings, you can set up a Wi-Fi connection by selecting Wireless Network Configuration. The adapter will then start searching for available WiFi connections.

Find your WiFi connection and select it with the OK button (**Rem.4**). To type letters/numbers, use the navigation buttons to scroll to the correct digit and then click '>' (**Rem.15**) to go to the next digit. Press '<' if you wish to go back to previous digit (**Rem.3**) Once you are finished, press down the OK button (**Rem.4**) to confirm.

Once your WiFi is connected, the main menu screen will show and the WiFi signal will appear in white at the top left corner. Please note: Wi-Fi password is case sensitive.

Wireless Network (WPS PBC)

Select this option to search for your WiFi connection. Whilst this has been selected you will have 120 seconds to click the WPS button on your WiFi modem. This will connect your WiFi to your adapter without manually writing in the passcode.

Settings: Date & Time

Manually setting date and time

There is the option to manually set the time and date instead of using auto-detect to set this up.

Go to 'Configuration' settings and select 'Date&Time' by scrolling and selecting with the navigation buttons and confirm selection with the OK button (**Rem.4**).

Set Date and Time

Select 'Set Date and Time' with the OK button (**Rem.4**) and choose 'Manual Setup'.

Change the day by highlighting the character and use the navigation buttons to scroll through to the desired day. Once you have got the correct unit, click '>' (**Rem.15**) to go to the month. Continue this process with the year, the hour and the minutes.

Once the manual set up is complete, press down the OK button.

To change the format of the date and the time, you can alter these settings under the 'Date&Time' function.

Set Time Format

Select the option to choose between a 12 and 24 hour clock on the time display.

Set Date Format

Select this option to select the order of the date

Settings: Alarm Clock

Setting Alarm 1/Alarm 2

To set an alarm on your radio, go to 'Configuration' settings and scroll through to select the 'Alarm' option with the navigation buttons. Alternatively, press the 'Alarm' button on the remote (**Rem.9**)

After opening 'Alarm' settings, select Alarm 1 or Alarm 2. Following this, highlight 'Turn On' and select this option.

Select 'Repeat' to choose the regularity of your alarm with the Navigation buttons. You can choose between Everyday, Once or select individual days for the alarm to sound. Once you have made your selection, press the '<' button (**Rem.3**) to go back to the other alarm settings.


Select 'Time:' and the alarm hour will be highlighted. Use the navigation buttons to change the hour, and once complete, press '>' (**Rem.15**) to then change the minutes.

Once the minutes are at the correct value, press down the OK button (**Rem.4**) to confirm and go back to alarm settings.

Now navigate down and select 'Sound:' with the OK button. You can now choose between beep, melody, internet radio, FM or DAB/DAB+.

If you are setting your alarm sound as internet radio, FM or DAB/DAB+ then you will now be taken through your preset favourite stations. Select your chosen alarm station with the navigation buttons and OK button.

Settings: Alarm Features

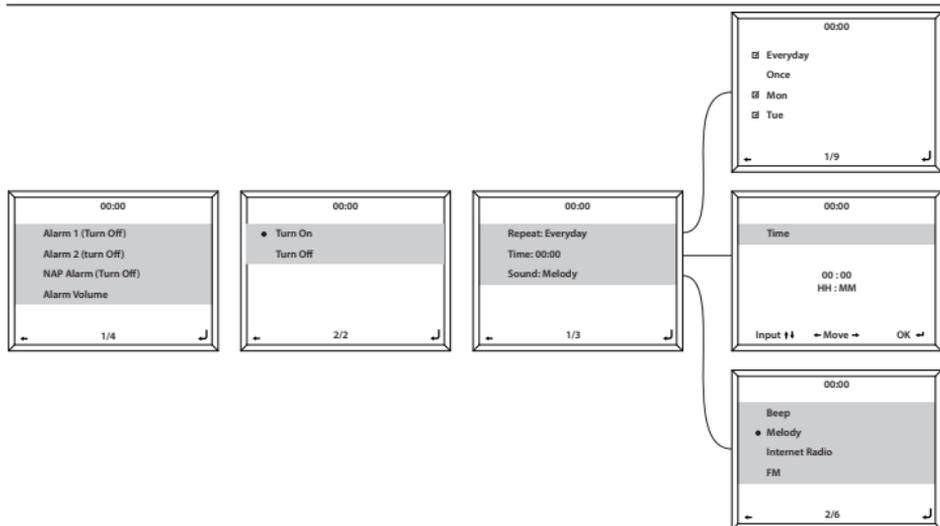

How to cancel your alarm

To cancel your alarm, select 'Alarm' in 'Configuration' settings or the 'Alarm' button on the remote (**Rem.9**), and select the alarm you wish to turn off. Once the alarm is selected, you will have the option to turn off or on. Highlight the 'Turn Off' option and use the OK button to confirm (**Rem.4**).

NOTE: Change the alarm volume by going to 'Alarm Volume' setting in the Alarm setting screen.

How to turn off your alarm when sounding

When your alarm is sounding, select the 'Alarm' button (**Rem.9**) or 'Standby' button (**Rem.1**) for the alarm to stop. If you have set an alarm to sound everyday or more than once, the alarm icon will still remain on the main display screen.

How to put your alarm on snooze

When your alarm is sounding, press the 'Snooze' button on the remote (**Rem.21**) to stop the sound and put into Snooze mode. The Snooze function will make the radio sound again in 5 minutes.

Stop the Snooze alarm by pressing the 'Power/Standby' (**Rem.1**) or the 'Alarm' (**Rem.9**) buttons.

Alarm volume

The 'Alarm Volume' option can be selected on the main Alarm setting screen.

Change the alarm volume by using the '<' and '>' buttons (**Rem.3/15**) to change. Once the correct sound volume has been chosen, wait a few seconds for the radio to automatically take you back to alarm setting options.

Please note: the alarm volume set here will be the alarm sounding volume. This cannot be altered when sounding.

Please note: The alarm volume set in this setting will be the alarm sound and it cannot be changed with the volume buttons when the alarm sounds.

Nap alarm

After selecting 'Alarm' in 'Configuration' settings, or the 'Alarm' button (**Rem.9**) on the remote, select 'NAP alarm'.

Choose how many minutes you would like to have the nap alarm on with the options of: 5, 10, 20, 30, 60, 90, 120 minutes.

Once set, the Nap alarm will display on the bottom right of the standby screen as [0*Time Set*]. The nap alarm timer will display here how many minutes are left of the nap alarm.

Settings: Additional Features

The following options are available in Configuration settings:

Timer

In 'Configuration' settings, select the option for 'Timer' and a screen with 00:00 will display.

To go up in seconds, click the '>' button (**Rem.15**). To go down in seconds, click the '<' button (**Rem.3**). Hold down the '<' or '>' to move through the timer quickly.

Once you have chosen the correct timer amount, confirm it by pressing the OK button on the remote (**Rem.4**).

Dimmer

The dimmer button allows you to select two different brightness modes. You can alter the two brightness settings in 'Configuration' settings and selecting the option for 'Dimmer'.

Select 'Power Save' mode to change one of your brightness levels with the choice of up to 20 levels. When there is no activity of the radio for 15 seconds, this lower brightness level will set until a button is clicked and the 'Turn on' setting will activate.

Select 'Turn On' mode to be the brightness for when the radio is active and in use.

Software Update

Will show here if a software update is available for the adapter. If one is available, please select for the update to initiate.

Reset to default

Select this option to reset your adapter and revert all of the settings and presets made.

Confirm that you would like to reset the unit and its settings by selecting 'Yes'.

Sleep Timer

To set a sleep timer, select the 'Sleep' button on the remote (**Rem.8**) and press repeatedly to switch between sleep times - these will display on the top right of the display screen.

There is an option between 15, 30, 60, 90, 120, 150, 180 minutes. Once this has been selected, the timer amount and a sleep image will show on the top right of the radio screen.

To turn Sleep off, simply keep selecting the 'Sleep' button until the function is removed from the display screen, or 'Turn Off' in configuration settings.

Remote Control App

To begin controlling your radio via a remote control app on your smart phone or tablet, you can download the 'Air Music Control App' in your device's app store.

Firstly, ensure that your phone or tablet is connected to the same WiFi as the adapter.

Alternatively, go to Configuration Settings > Device, for the following options:

1) Rename (AirMusic) - Select this to rename your device.

2) AirMusic Control App - Select this to show two QR codes - one for Apple devices, and one for Android. Scan the relevant code to download from the App store on your phone or tablet.

Once the app is downloaded, open the app and ensure that your adapter is switched on and out of standby mode. The app should then automatically connect to your Majority adapter, once selected via the app. You can now begin adjusting settings and navigating around your adapter.

Additional Setting Options

Time display - Select Analog or Digital

Language - Select your chosen language within the list

Display - Choose the display to be Colour or Monochrome

Power management - Select this to configure the radio to go into standby mode automatically after a set time of inactivity or if there is no WiFi signal. Select turn off to ignore this function.

Buffer - Configure the buffer time of the music playback: 2/4/8/ seconds.

Weather - Activate/deactivate the weather forecast for the standby display. Choose your preferred temperature unit and enter your location. This will then display in the clock display on the standby screen every 10 seconds.

Local radio setup - Manually set up your location for Local radio rather than allowing the radio to Auto Detect.

Playback setup - Select the playback mode of the Media Centre: OFF, Repeat All, Repeat One or Shuffle.

Device - Default name for DLNA is "AirMusic". You can rename the device for DLNA setup.

Resume when power on - Turn off the function for the adapter to resume when powered on. Instead, the screen will remain in main menu.

Troubleshooting

Malfunction	Possible causes/measures
No power / function	<p>Check whether the power is switched on or off at the wall.</p> <p>Check whether the power adaptor is properly connected to power outlet or not.</p>
No sound	<p>Check whether cables are properly installed via the Line Out or Optical Port on the unit. Ensure that the volume via the adapter is switched up and volume amended from your external speaker system.</p>
Function disturbance	<p>Switch off and unplug the unit. Leave it for 2 minutes and switch it on again. Perform a factory reset and rescan for stations.</p>
WiFi not connecting	<p>Ensure WiFi mode is selected in settings and the correct passcode is being entered for the WiFi modem.</p> <p>Try connecting to the WiFi manually and via WPS.</p> <p>Reset your WiFi modem.</p> <p>Please try performing a factory reset and try reconnecting.</p>
Bluetooth not connecting	<p>Ensure that you are on Bluetooth mode on the radio and the Bluetooth on your device is switched on. Select the Bluetooth device 'Majority Robinson' and you should now be able to play audio.</p>
Radio is not allowing me to select a different station	<p>If you have been controlling the radio via the app and then go to the radio to select a different station, this will prevent a different station from being played. Please continue controlling via the app or disconnect from the app to use the radio remote.</p>

Specifications

Specifications

Power Supply	DC 5.9V 1.2A (output)
Mode:	Internet Radio: MediaU FM: 87.5MHz - 108 MHz DAB: 174 - 240 MHz Bluetooth 3.5mm Line-Out Optical Out
Network	802.11b / g / n (WLAN) Encryption: WEP, WPA, WPA 2 (PSK), WPS
Dimensions	11.5 x 8.7 x 5.2 cm

Warranty

All products come with a standard 12 month warranty. All items must be registered on www.majorityonline.co.uk for the warranty to be valid. Once on the web page, use the menu to find "Register Your Product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

1. **Read these instructions.**
2. Keep these instructions. Instructions are also available for download at www.majorityonline.co.uk
3. Heed all Warnings
4. Follow all instructions
5. Do not clean the apparatus near or with water
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during light storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel.
Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus.
13. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus. Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.



This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference.



Risk of electric shock.
Do not open



Read all instructions carefully before use and keep for future reference



When servicing, use only identical replacement parts



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference

MAJORITY

www.majorityonline.co.uk